



BLOTZ

Rough Fences

B20-WF-106 / B28-WF-113


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

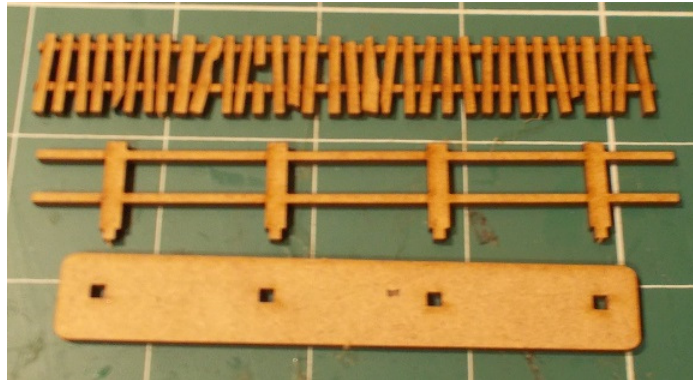

Each section of fence is formed from the three pieces shown above.

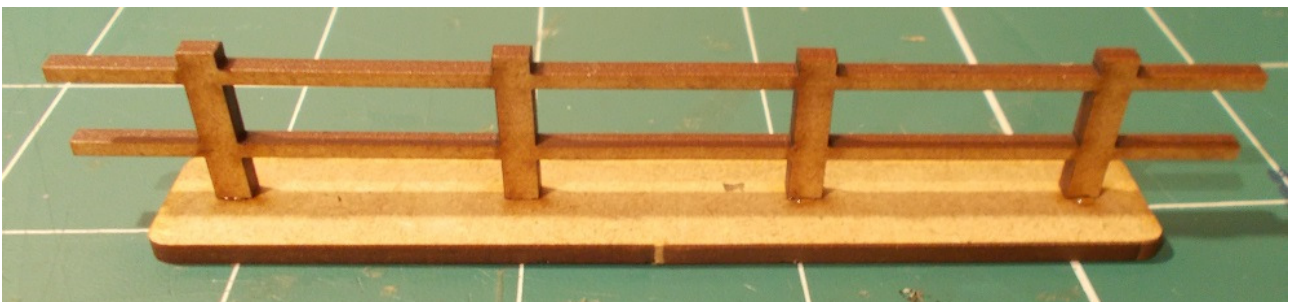

Attach the posts to the base.

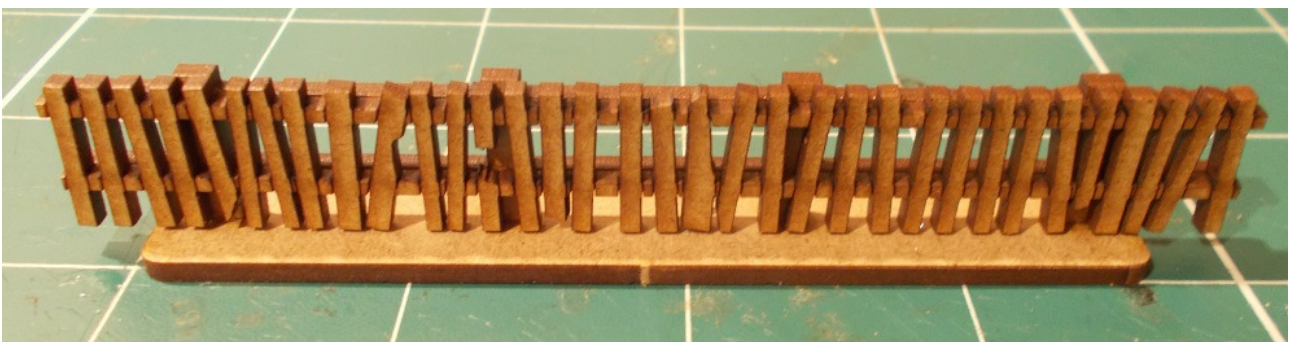

The posts are slightly offset - glue the staves onto the posts so there an even amount of base in front and behind the fence.

The fence extends beyond the ends of the base allowing fences to be joined at any point.