



Japanese Walls (Broken)

B28-WF-118

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.




Take the base and two wall sections from the sprue. Glue each pair of walls back to back and attach them to their base so that there is a 2mm gap at the flat end.

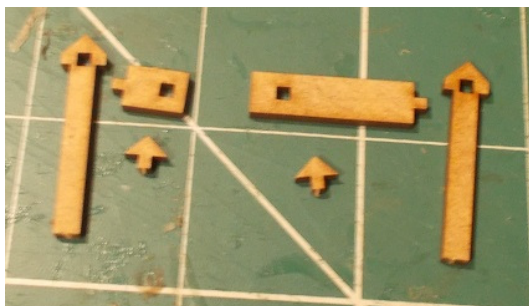

Take the uprights, bar and triangular supports from the sprue.



Glue them together as shown.

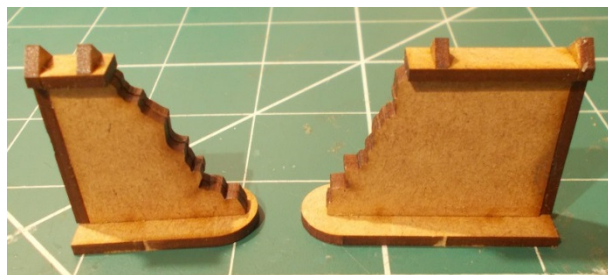

Glue these to the walls so the uprights are flush with the walls.

Painting


The wall was sprayed white using car undercoat

The roof was sprayed red using car undercoat then a light black ink wash applied.

The stone was sprayed grey using car undercoat then a light black ink wash applied.



Before going any further it is easiest if you paint the components now.

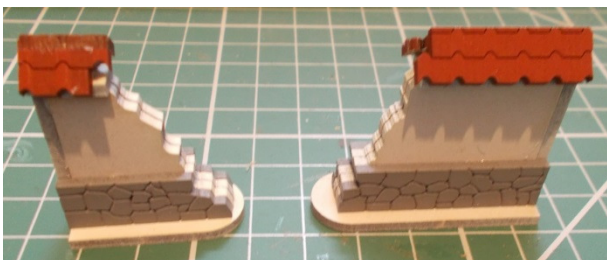

Glue the stonework and roof sections into place.



The finished walls with basing material added.