

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

A full-colour copy of these instructions can be found on our website: www.blotz.co.uk

Type 26 Pillbox

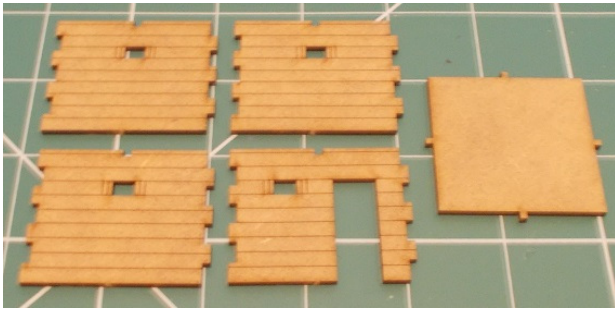

Remove the five pieces of the pillbox from the sprue.

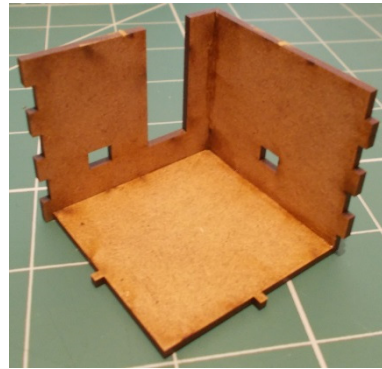

Glue the doorway and one wall to the roof section. It is easiest to do this with the pillbox resting on its roof (as shown above). All etched detail should face outwards.



Glue the other two walls into place and when dry turn the pillbox the right way up.