



10mm Rooftop Lift

B10-ACC-406


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

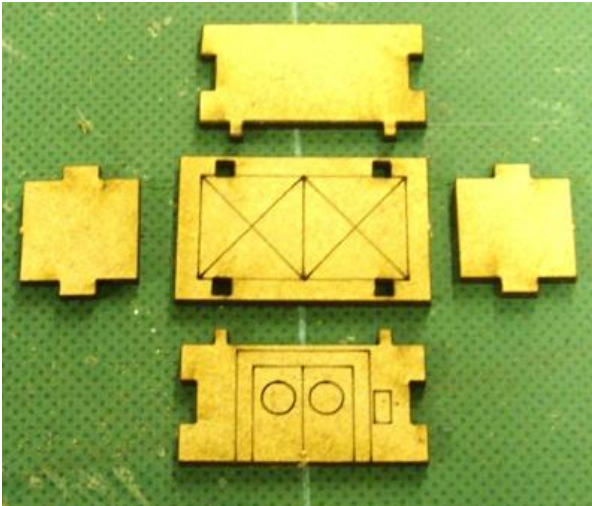

The lift is formed from the pieces shown above.

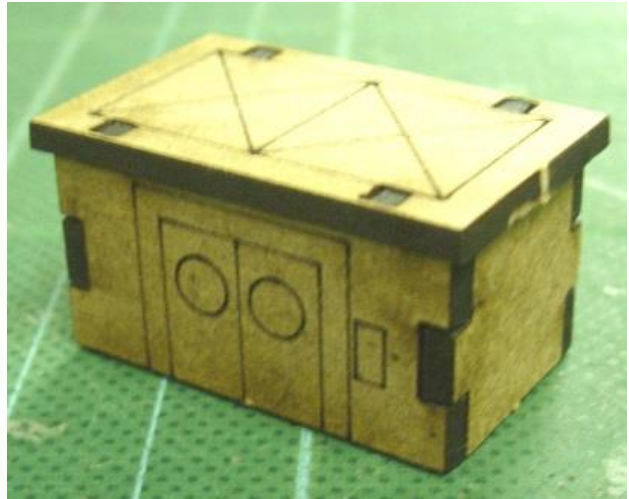

Glue the front and back pieces to the roof using the lugs, then attach the end walls.