



Rounded Building #1

B10-MC-001

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue.

Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

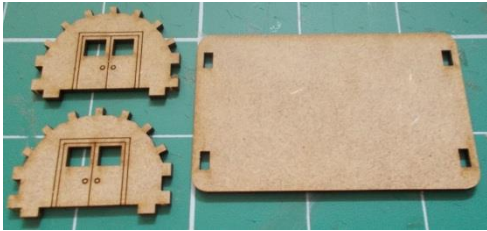

Remove the base and end pieces from the sprue.



Glue the end pieces to the base – etched detail facing outwards.



Take the two side pieces.




Then glue them into place as shown above.



Take the roof pieces.



Starting with the three central ones, glue them into place. Then add the rest of the roof pieces.

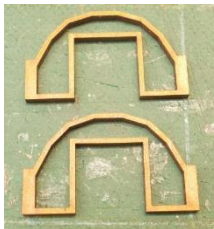

Take the two end frames.



Glue them into place.



The completed buildings.