



10mm Middle East #2

B10-ME-002


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

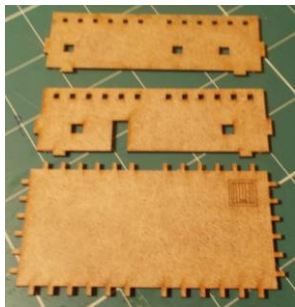

Remove the front and rear walls of the building plus the main roof from the sprue.




Glue the roof to the wall as shown – note the position of the hatch (top right in pic).



Take the side walls.



Glue these to the building as shown.

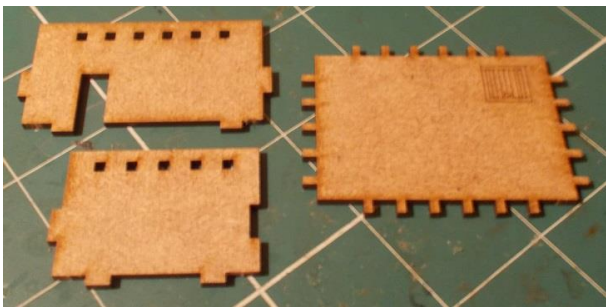

The small roof and two inner walls...



..should be glued together as above.




Glue the small building into place against the side wall.



Then glue then final wall into place.



Glue the whole building to the base.

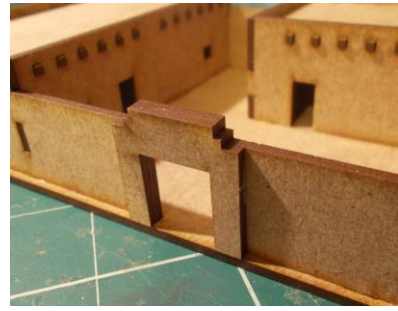

Add the outer archway.



The finished Building.