



10mm Middle East #7

B10-ME-007


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

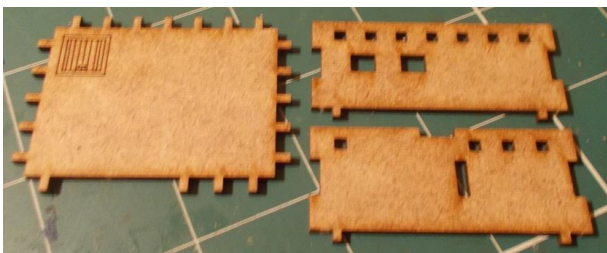

Remove the front and back walls of the building plus the roof piece from the sprue.



Glue the roof section to the walls as shown – note the position of the hatch.

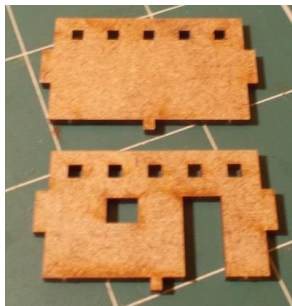


Take the side walls.



Glue these to the building as shown.



Attach the building to its base.

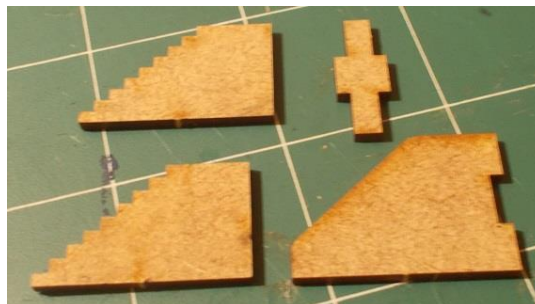

Take the two stepped pieces, end wall and side wall from the sprue.



Put then end wall into position, then glue the two stepped pieces in place.



Add the front wall.