



10mm Middle East #9

B10-ME-009

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.




Take the two wall pieces and shelter roof from the sprue.




Assemble them as shown above.

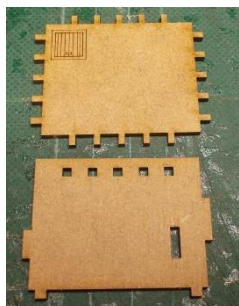

Take the wall and roof piece shown.

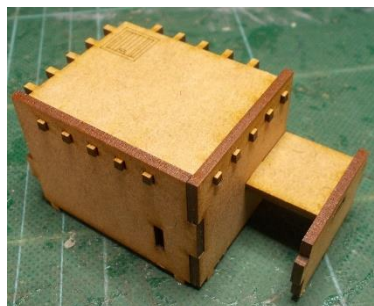


Attach them to your model.

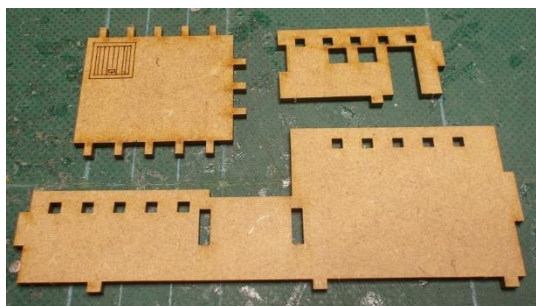

Take the long side wall, roof piece and short wall.




Add the side wall followed by the roof and short wall.

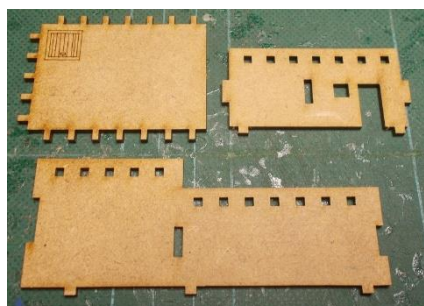


Remove the long rear wall, roof and wall piece from the sprue.



Add the wall piece, followed by the roof and rear wall.

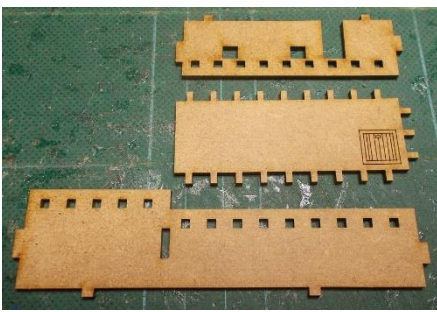

Take the long side wall, roof and inner wall.

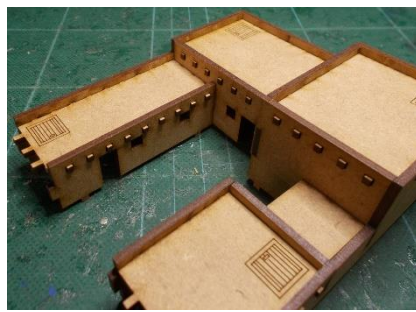


Attach the inner wall, followed by the roof and long side wall.




Add the front wall.



Take the three doors (if required)

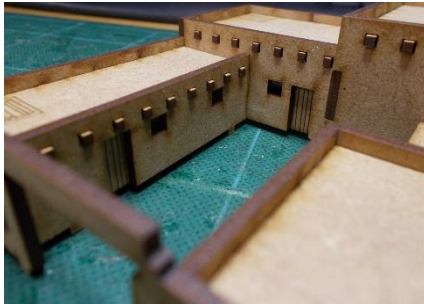

Glue one inside each doorway.

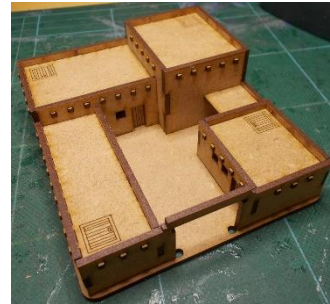


Glue the model to its base.




Take the gates and support piece.



Sit (do not glue) the gates in the holes provided, then slot the support onto the top of them. Glue the support to the top of the gateway.

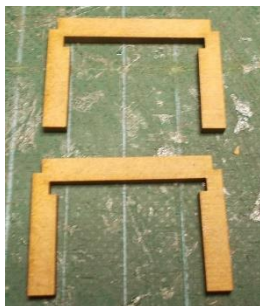

Take the two other gateway pieces.

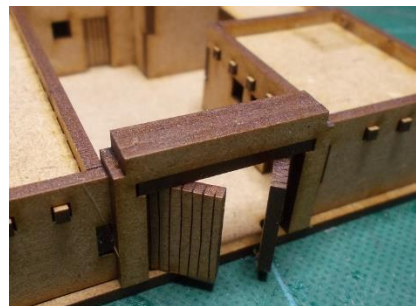

Glue one to the front and one to the rear of the gateway.



The finished model.