



10mm Snake Rail Fence

B10-WF-002


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

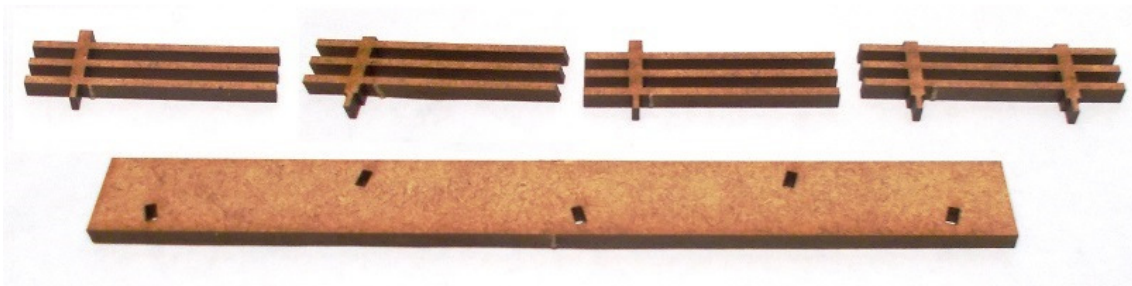

Each section of fence is formed from the pieces shown above.


Note, the three pieces on the left should alternate with 1: the post flush to the base of the fence, 2: The post extends beyond the base of the fence, 3: The post is flush to the base of the fence

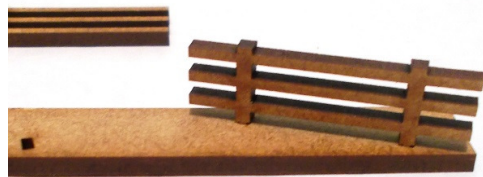

First insert the section which has 2 uprights on it.



Slide the rails of the next piece between the rails of the first piece (see pic) and slot the tab into the base.

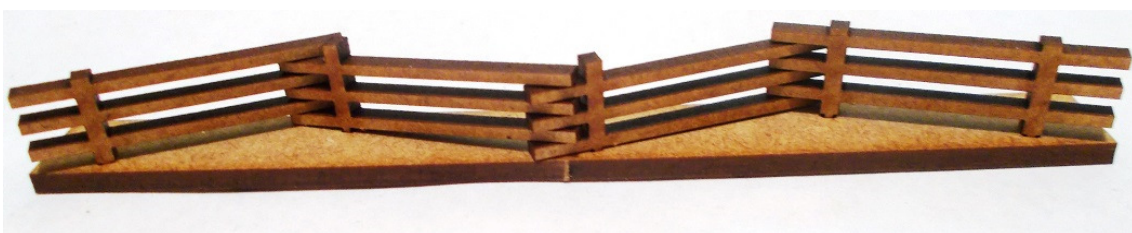

Repeat this with the other two pieces to get the completed fence.