



BLOTZ

10mm Barbed Wire Barricades

B10-WF-004


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

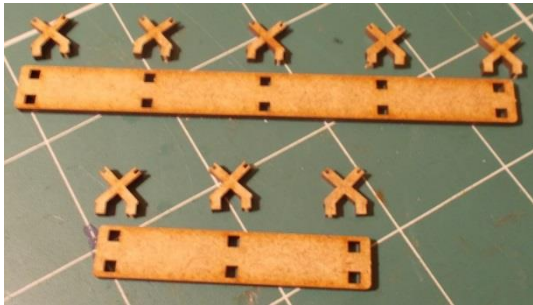


Remove each base and the relevant number of supports from the sprue.

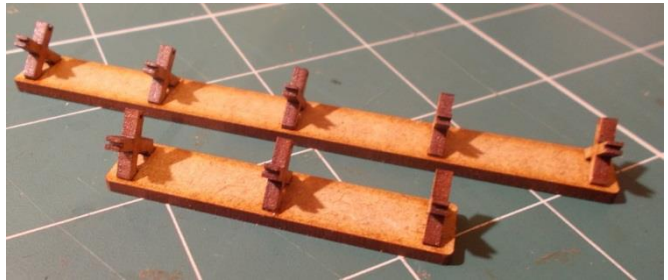


Glue the supports into the bases



Remove a length of wire from the spool provided. Each long base uses 71cm of wire, each short base uses 36cm of wire. Wind the length of wire around a 6mm diameter object.

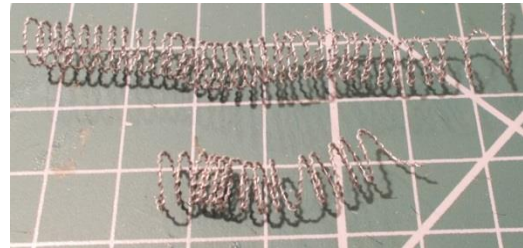

The wire when removed from the object.

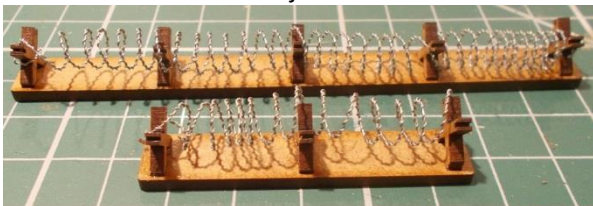

Glue the wire to the supports.