



10mm Subways (x4)

B10-ACC-405

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

Subways (B10-ACC-405)

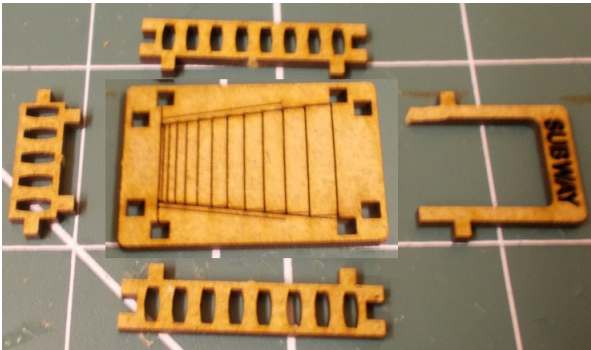

Take all the pieces for a subway entrance from the sprue (as shown above).

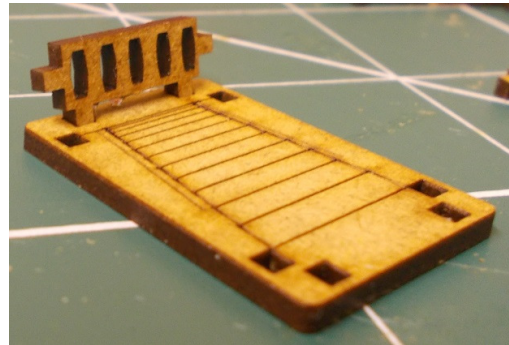

Apply some glue to the short end and place it into the slots on the base (as shown) – **DO NOT** push it complete home at this point.



Using the lugs on the sides of the piece you have already positioned, slide the two long side pieces into place. You can now push the end piece fully home. Ensure the opposite ends of the side pieces are still proud (see above).



Place the subway sign piece into position using the lugs on its edges to align it with the side pieces, then push it home into the holes on the base.