



10mm Hanger / Warehouse

B10-CS-500


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

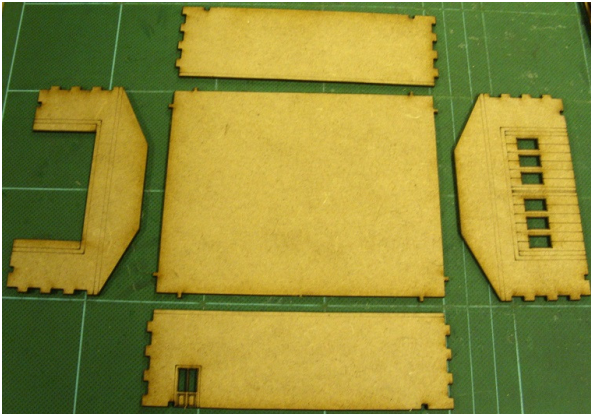


Start by removing the floor and wall sections shown above from the sprue.

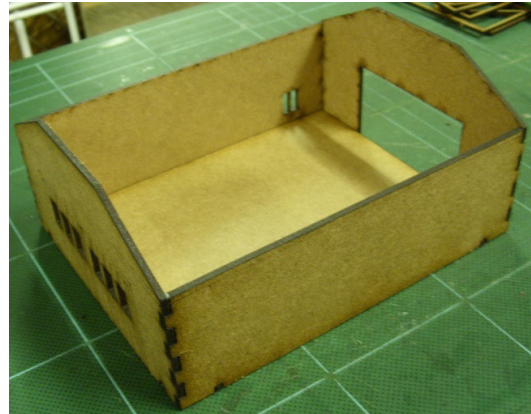


Glue them together as shown above with all the etched detail facing outwards. Allow this to dry.



Glue each of the decorative pieces to the walls. Note one side wall has a door space left in it and both side walls should be flush to the base which leaves a small gap at the top (which allows the roof to fit)

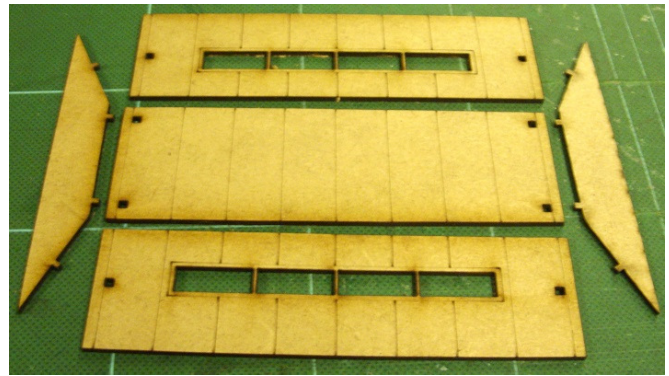

The roof is formed from the sections shown above.

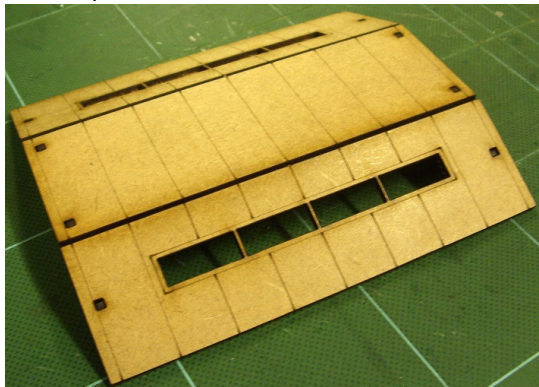

Glue these together as shown.

