



10mm 3x2 Residential Foyer

B10-MW-100

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

Foyer (B10-MW-100)



Start by removing the sections shown above (left) from the sprue. There are enough parts to create both doorway sections.

Glue them together as shown in the image on the right.

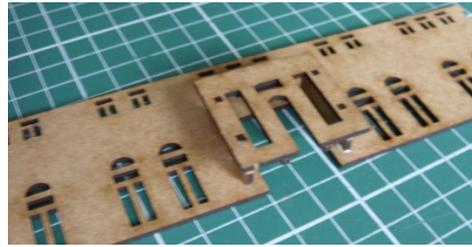

Glue each doorway to the **back** of the long sides, using the lugs/holes provided.



At the same time, glue a triangular bracer to the back of the long sides at each end. Leave these to dry.



Glue the shorter end walls into place to give a hollow rectangle. Once this is dry, glue the decorative columns and balconies into position.



10mm 3x2 Residential Ruined Floor

B10-MW-159

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

Upper Ruined-Section (B10-MW-159)



Remove the four walls and four rectangular supports from the sprue. Glue one support to the lower rear edge of each wall piece as shown above. Allow to dry.

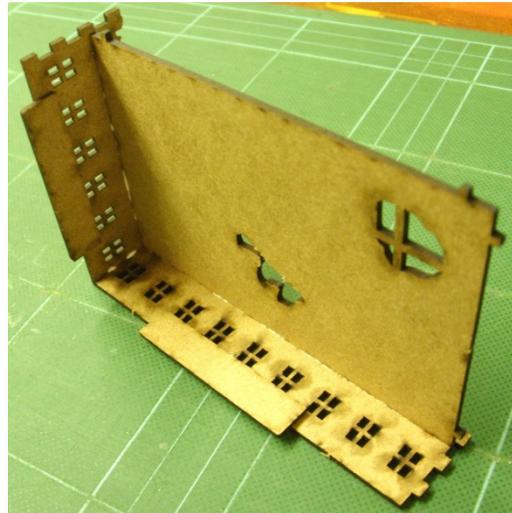

Once the supports are dry, attach each wall section to the floor piece. Refer to the final picture (below) to see the best configuration of the pieces.



Now glue a balcony piece into position below each set of three windows.

There are complete and damaged balconies available, and it up to personal choice as to which you stick where.

