



10mm 5x1 Mixed Foyer

B10-MW-112

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

Foyer (B10-MW-112)



Start by removing the sections shown above (right) from the sprue. There are enough parts to create all four doorway sections. Glue them together as shown in the image on the left.



Glue the doorways to the **back** of the long sides, using the lugs/holes provided.



At the same time, glue a triangular bracer to the back of the long sides at each end. Leave these to dry.



Glue the two end walls into place then add the decorative columns.



10mm 5x1 Mixed Ruined Upper Floor

B10-MW-160

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

Upper-Section (B10-MW-160)

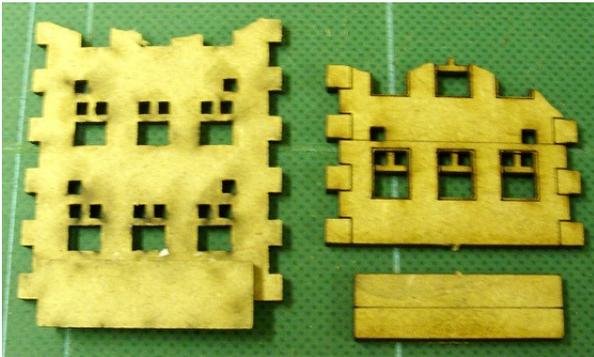

Remove the four walls and four rectangular supports from the sprue. Glue one support to the bottom rear of each wall (as shown above).

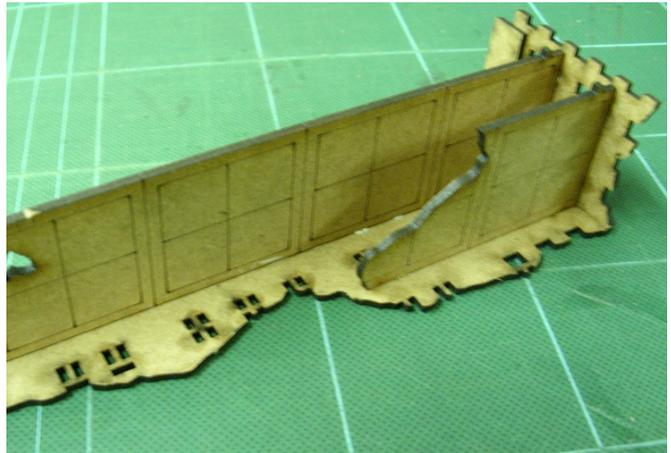

Take the two floor pieces and glue them to the long side and one end as shown above.



Then glue the other long wall and end into place.