

**Please refer to the website for
assembly instructions.**



**10mm 4x4 Residential
B10-MW-106**

This is a model kit and is not suitable for those under 12 years.

Blotz

**90 Fullers Avenue
Cricklade
SN6 6EU**

**info@blotz.co.uk
www.blotz.co.uk**



10mm 4x4 Residential B10-MW-106

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

4x4 Residential (B10-MW-106)




Remove each set of foyer pieces (shown above) from the sprue.




Glue together as shown above.




Glue this assembly to the back of a wall section, aligning the lugs to the holes provided. Leave these to dry.

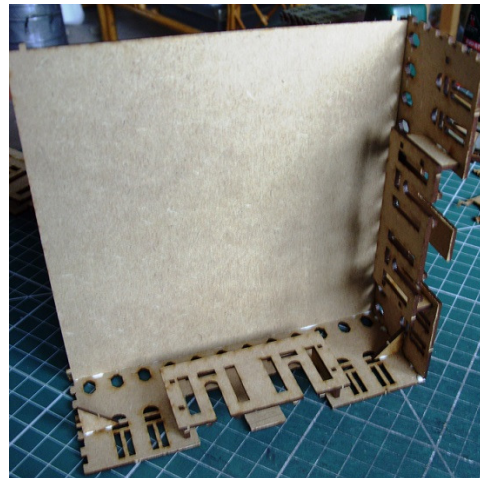

Using the lugs on the roof piece, attach it to one wall section. Add the corner bracers into position at each end of the wall.

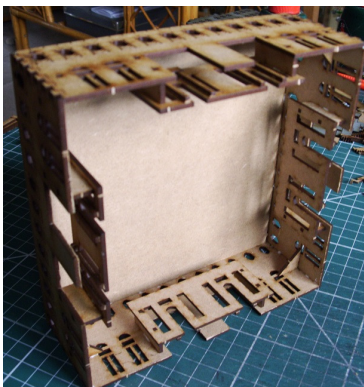

Work around the building attaching each wall section in turn.

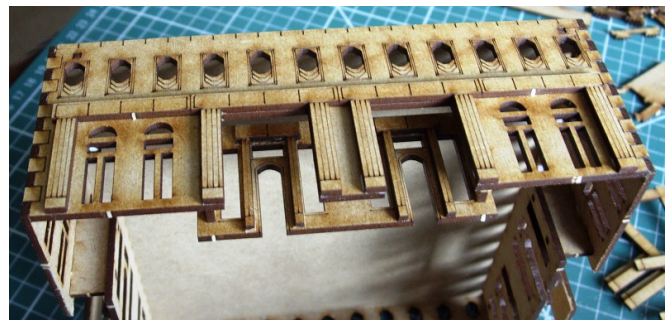

Finally glue the columns into position as shown.