



10mm 4x4 Shops / Cross

B10-MW-111

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


Shops (B10-MW-111)

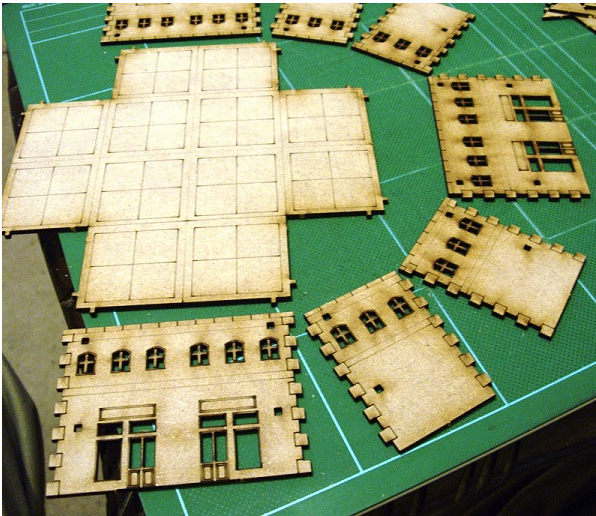

Start by removing each section from the sprue. As you do so, mark the back of it with its letter.

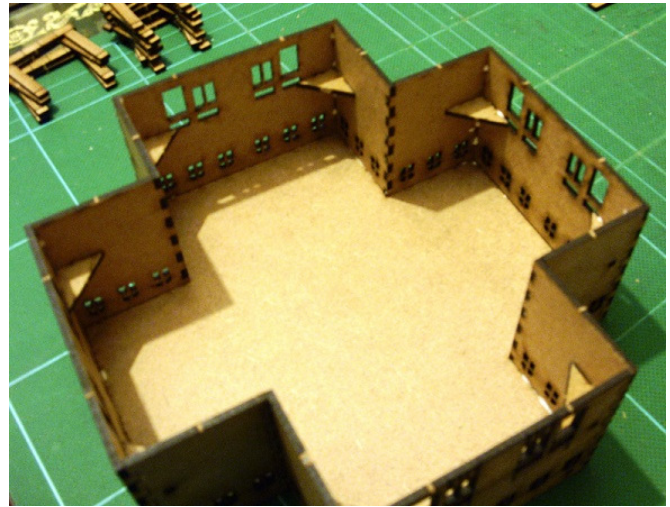

Starting with an end section (A), move clockwise around the building, adding two side pieces (B and C), end section (D) and two side sections (E and F). These should all attach to the roof using the lugs provided. Corner bracers should be used as shown above. Note – the above image shows the building sat on its roof (i.e. upside down).

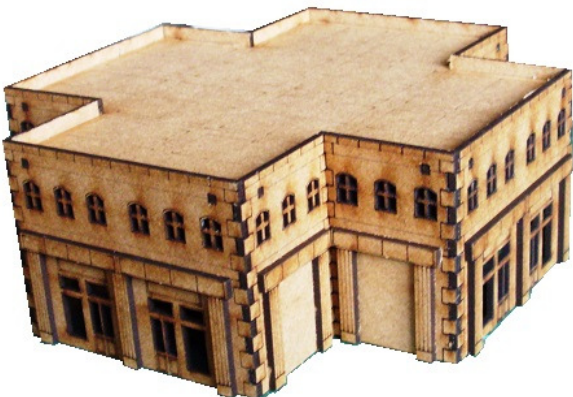

Finally add the decorative columns as shown above.