



10mm Flyover Support Column

B10-RD-200

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.




Start by removing the sections shown above from the sprue.



Glue the four walls together, ensuring that the notches are on opposite sides as shown above.

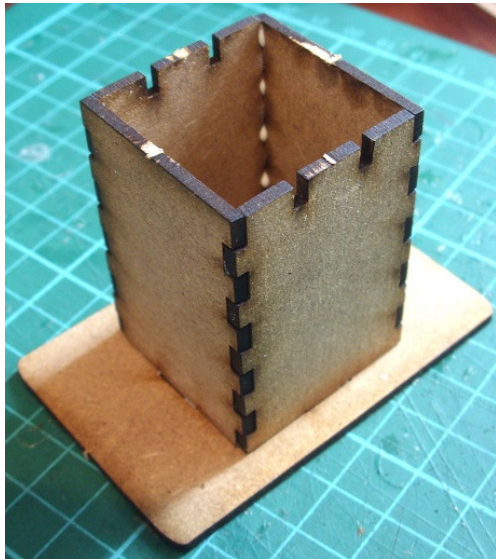

Glue to the base so that the notches are facing the long sides (as shown)

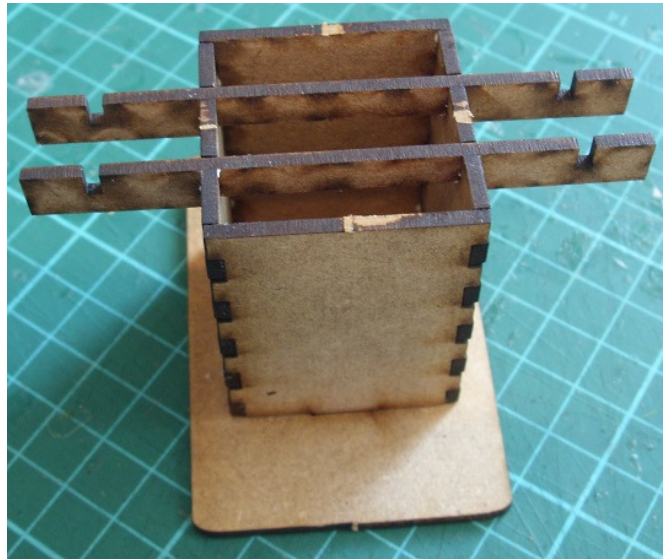

Finally glue the support arms into position.