



15mm Fire Station

B15-CS-011

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

We suggest you paint the component parts of your model prior to assembly (see below).

Lower Level



Start by removing the walls from the sprue.




Glue them together as shown and attach them to the base.



Take the shutter doors.



Glue one behind each of the archways.

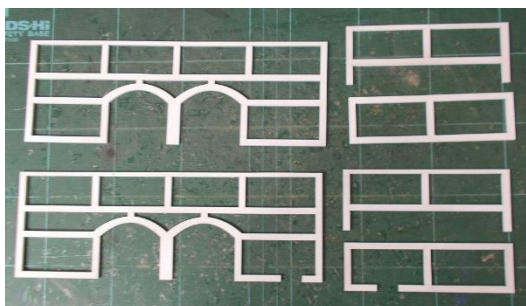


The decorative side panels.




Glue these to the sides of the building as shown.

Upper Level

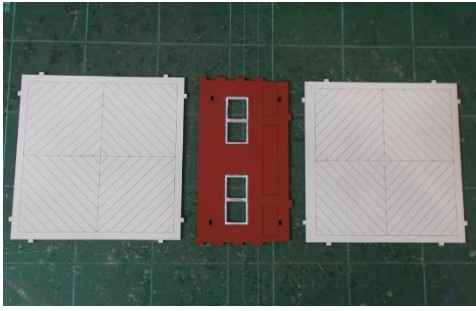

Start by removing the two roof pieces and centre wall from the sprue.

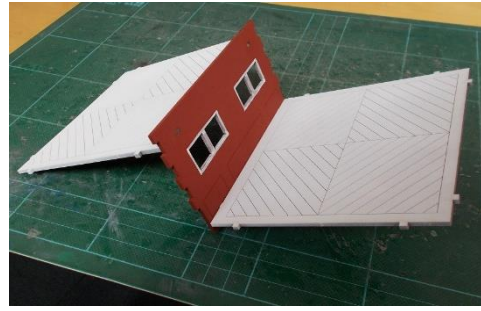

Glue them together as shown. Note – the lower roof piece has a wider strip at one side – and it is this side which attached to the centre wall.



Take the side pieces.



Attach one side panel.




The add the other side.



Glue the walls at either end.



The attach the base.

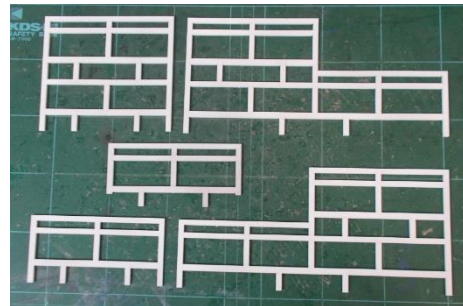

The decorative side panels.




The roof edge strips.



Add the strips to the lower roof area.



Add the decorative strip to the centre wall.

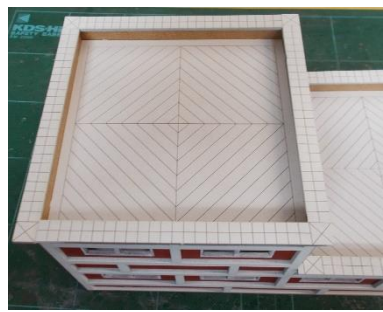

Add the edge strip to the upper roof.



The completed model.

Painting

The wall sections were sprayed with a red oxide car undercoat aerosol, while the rest was sprayed with a white car undercoat.

Window frames and the lower edge of the shutter doors were picked out with model paints.