


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

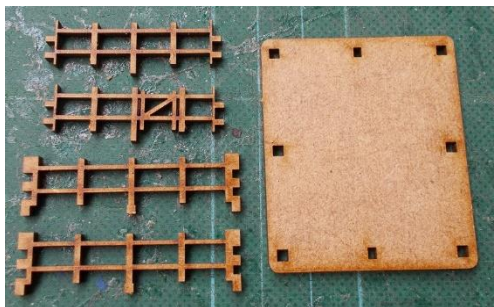

Start by removing the base of the pig pen and four fence sections from the sprue.



Glue the two long sections into position using the holes/lugs provided. Then glue the short sides into place. Note the gateway should be to the right (as shown).



Take the outer fence sections from the sprue. Note the position of the horizontal bars and make sure they are all the right way up.



Glue the long sections into place so that the horizontal bars match those on the inner section of fence. The ends should align with the posts. This piece should sit flush to the base.



The sty is formed from the pieces shown above.



Turn the roof upside down and glue the end walls into place. The short end of the walls should be towards the ragged side of the roof.



Glue the front and back walls into place.



The finished pig pen and sty