



Japanese House #4

B15-JP-005

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


Thatched Roof

Please see our separate instruction guide for creating a thatched roof.

Assembly

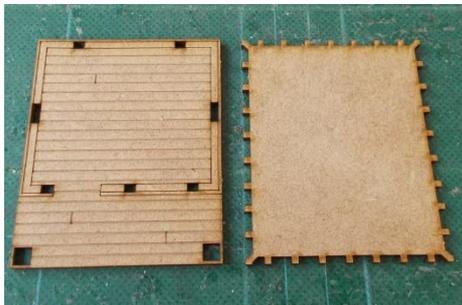

Take the floor and underbase.

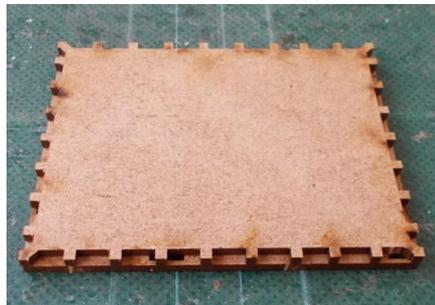

Glue the underbase to the underside of the floor as shown above.



Take the walls.



Starting with the front wall glue them into position as shown with their detailing facing outwards.




Take the outer wall frames from the sprue.



Glue the front and back frames in place, followed by the side frames.



The component parts of the porch.

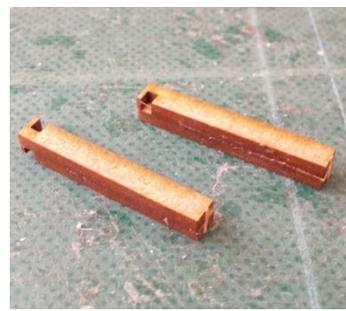

Take each pair of porch uprights and glue them back to back so that their notches point in opposite directions (as on the right)



Glue the uprights in position. The notches on the outside edges of the uprights should face towards the house.



Glue the porch crossbeams into place. The long end of the side crossbeams goes into the notch on the front of the house.



Attach the door (positioning it as desired)




Take the sections for the roof.



Glue the end sections to one side of the roof as shown with their etched detail facing outwards.




Attach the other side of the roof.

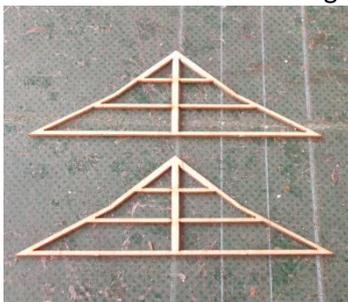


Take the end frames




And glue them into place.

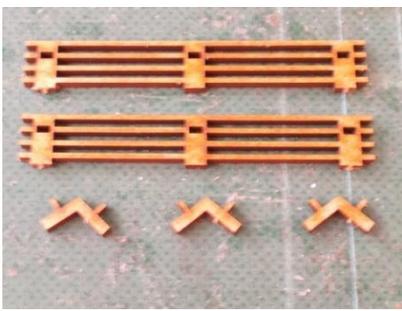

The ridge protector is formed from the pieces shown above.

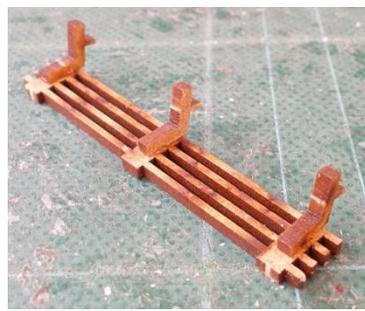

Carefully attach the supports to one side of the ridge protector, then add the other side.

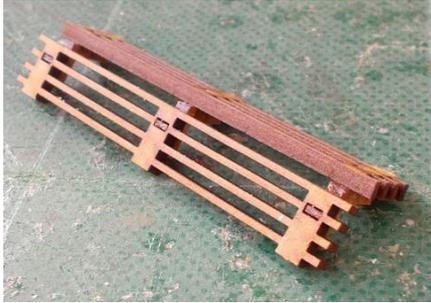

The completed ridge protector.



Place (do not glue) the roof section onto the house.



Add your thatched roof (see our separate guide on how to do this) and it has dried, glue the ridge protector into position.