

**BLOTZ**

# 15mm HQ Complex

## B15-MC-005


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

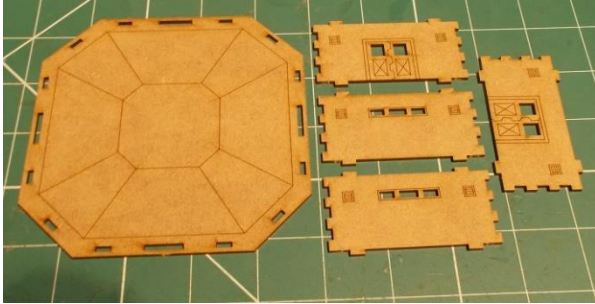

Remove the Floor and inner walls from the sprue.



Glue the walls to the base so that the etched details face outwards (see pic)

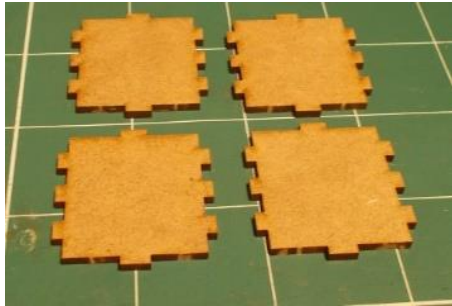


Take the corner walls.



Glue these into place.




Glue the top ring into position.

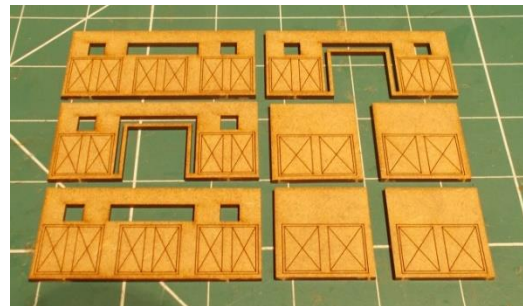


The outer wall pieces.



These glue over the top of the inner walls so that the doors / windows can be seen through the gaps.  
(see pic above)

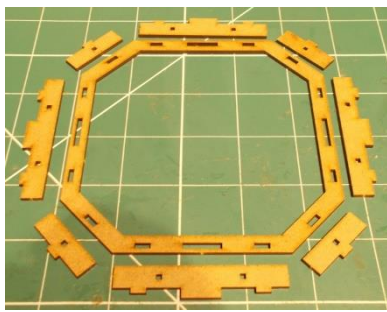

Take the ring and inner roof pieces from the sprue.

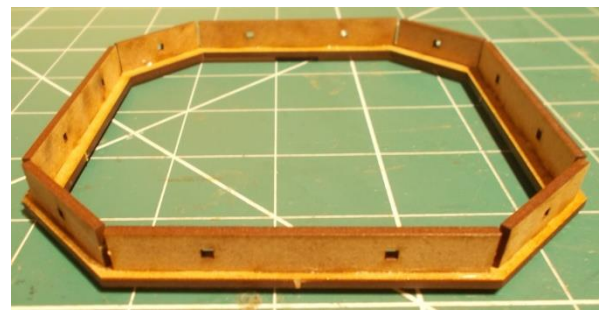

Glue these into place as shown above.



Take the roof supports


Note: four of these have a line etched onto them.




Glue the four supports with the line on them to the corners of the roof.



Glue the rest of the supports into place.

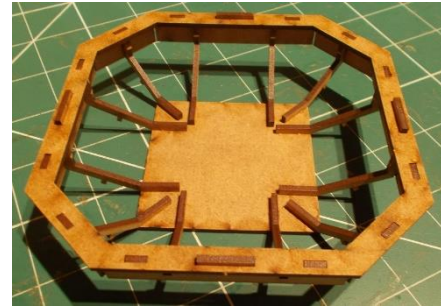


Turn the roof over and attach the square roof section.

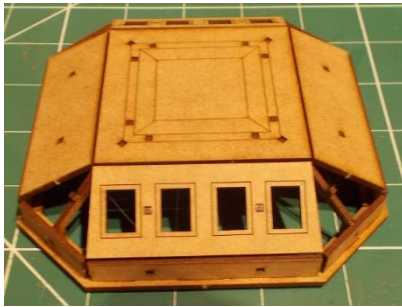

Glue the sloping side pieces into position.



Then add the corner pieces and raised square.

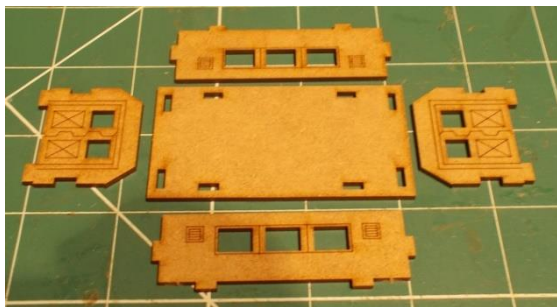


Take the base and sides of the corridor.



Glue them together as shown above so the etched details face outwards.



Glue the door surrounds and side strips to the model.

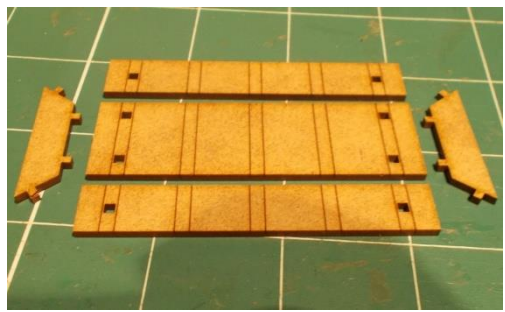

The corridor roof pieces.



Glue them together as shown above.



Place (do not glue) the roof onto the corridor.



The completed model.