



BLOTZ

15mm Desert Fort – Corner Tower

B15-ME-104


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

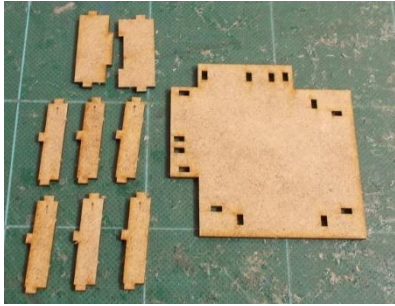


Remove the pieces shown above from the sprue.

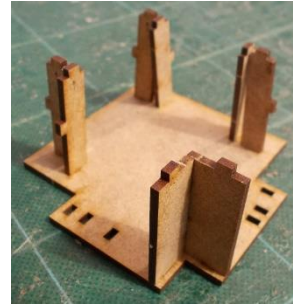


Glue them together as shown above – Note the angled supports have an arrow on them which should point upwards.



Attach the connector pieces.

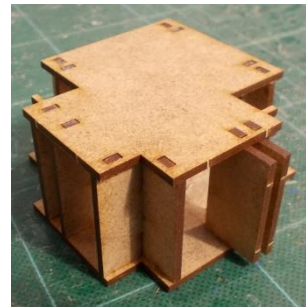

Attach the walkway section.

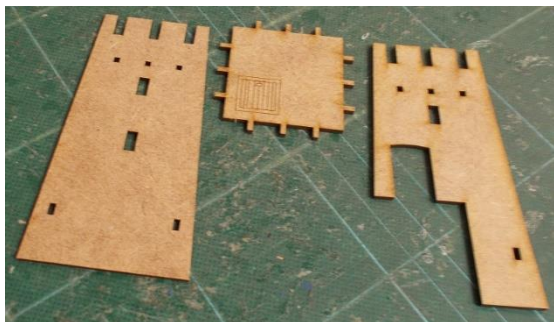


Take the tower roof and the two thinner tower wall pieces.



Add them to the model as shown.



Add the other two tower wall pieces.

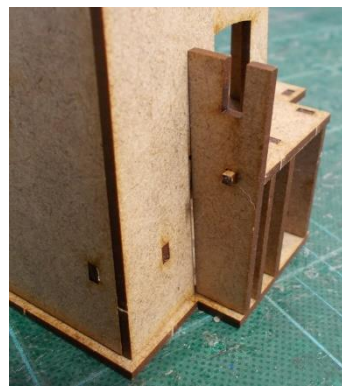

Add the front wall sections.



The finished model.