



BLOTZ

15mm Desert Fort – Short Wall - Arch

B15-ME-105


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

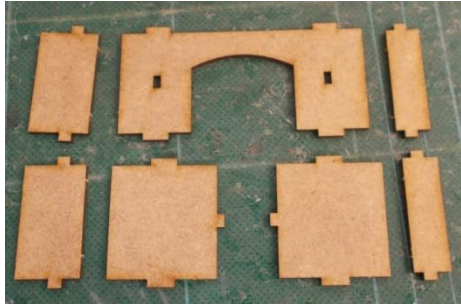


Take the arch and the two internal walls and connector pieces from the sprue.



Glue the internal walls to the back of the arch as shown above.

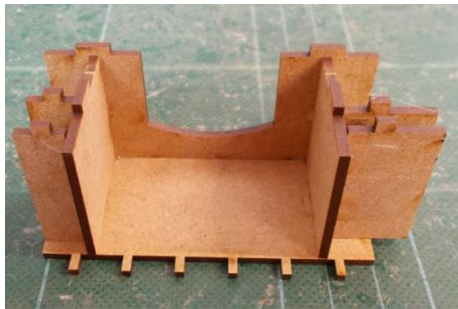

Attach these to the underside of the "roof" and add the connector pieces (see pic)

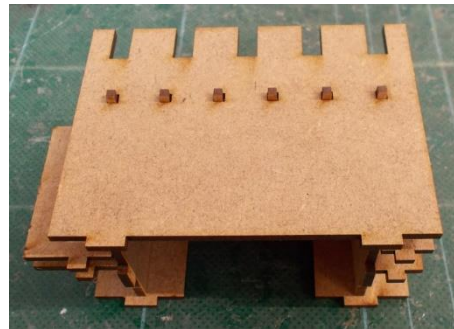

Add the front wall..



Attach the base, slotting each lug into the associated hole.



The finished model.