



BLOTZ

15mm Desert Fort – Short Wall - Door

B15-ME-108


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

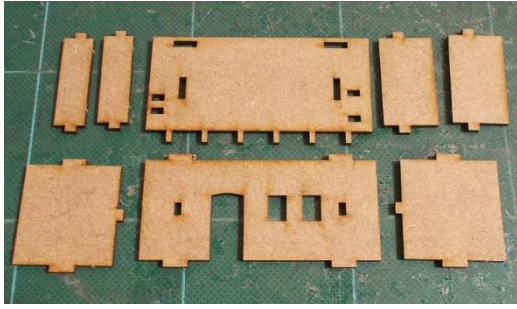


Take the pieces shown above from the sprue.



Attach the internal supports to the back of the rear wall as shown above.

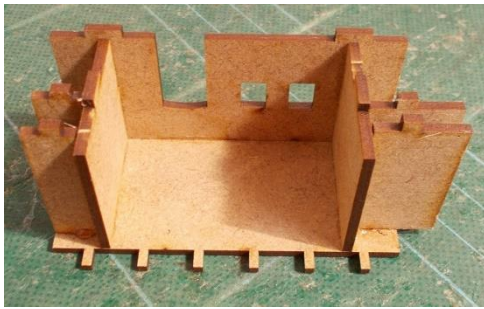

Turn the "roof" upside down and attach the other pieces to it as shown.

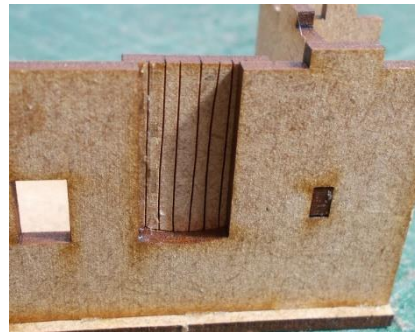

[Optional] Glue the door behind the doorway.



Add the front wall.



Attach the base, gently slotting each lug into the associated hole.



The finished model.