



15mm Desert Fort – Ruined Wall

B15-ME-109


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

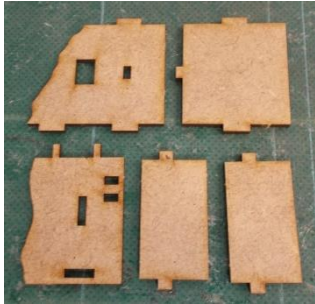


Take the pieces shown above from the sprue.

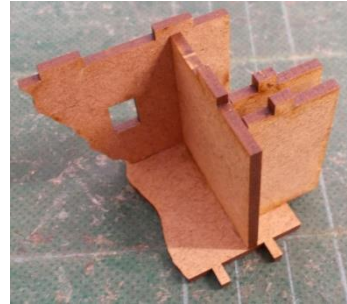

Turn the “roof” upside down and attach the other pieces to it as shown.



Add the front wall piece.

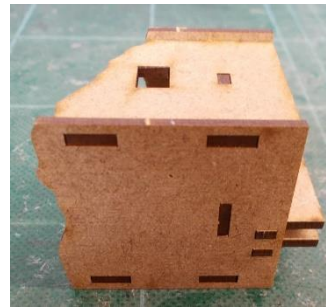

Attach the base gently sliding the lugs into the associated holes.



Take the pieces shown above from the sprue.



Turn the “roof” upside down and attach the other pieces to it as shown.



Add the front wall.



The finished model.