



BLOTZ

15mm Ancient City Walls – Very Short Wall

B15-ME-208

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.




Remove the pieces shown above from the sprue.

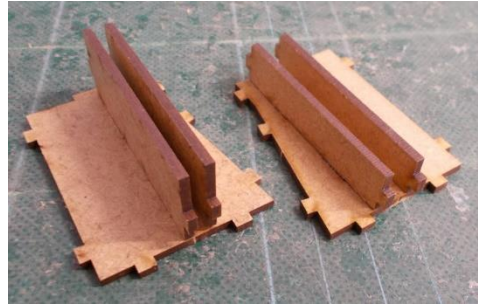

Glue the connectors to the main supports – the wider connectors being the ones closest together.

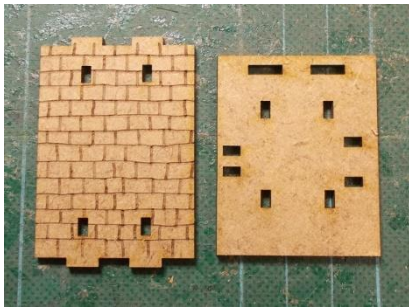

Take the base and rear wall.

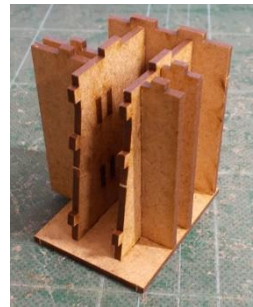

Glue the supports to the rear wall, then attach the whole assembly to the base (see pic).



Add the walkway section, gently slotting each lug into the corresponding hole.



Add the front wall sections.



Attach the long strip.



The finished model.