



**BLOTZ**

## 15mm Old West – Western Union / Bakery

### B15-OW-002

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

**Note: Due to their size / thickness certain parts on this kit are very fragile. Please use extreme care when working with them to prevent damage.**



Remove the front and side pieces shown above from the sprue.



Glue the side pieces and rear wall into place.




Then glue the base to the model.



Take the pieces of the top bar.



Add the side pieces of the top bar.

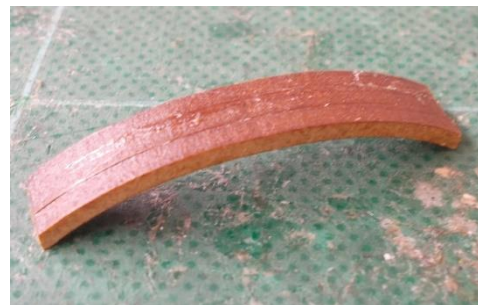

Glue the arched pieces together.



Attach the front framework to the model.



Add the curved portion of the top bar.



Add the rear and side frameworks.




The window sills.



Glue these into place in the slots under each window.



Take the frame components of the roof.

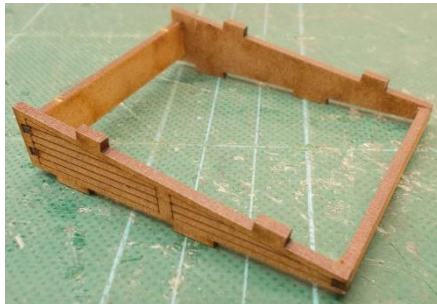

Glue them together as shown above.



Then glue the roof plate into position.



Add the side frames and top surround to the roof.



The completed model.