



# 15mm Crashed Starship - Bulkhead

## B15-SF-504

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


We suggest you paint portions of this model prior to assembly – see below for a painting guide.




Take the two sides of the main wall and the roof piece.




Stick the walls back to back, then add the roof piece as shown above.

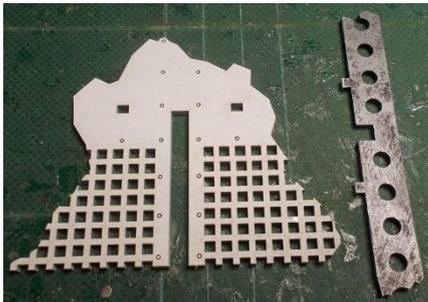


Take the grating and support girder.

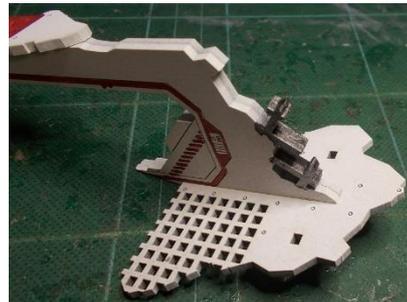

Slide the grating into position.

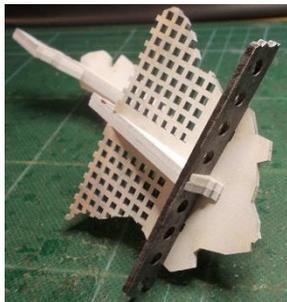

Then add the girder.

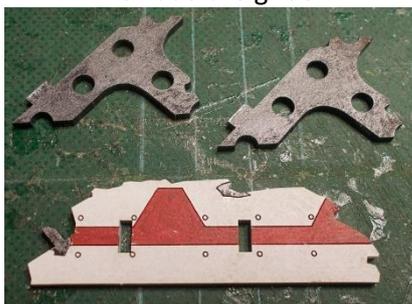

The pieces of the barricade



Glue the supports into place as shown above.

## Painting

We suggest you paint your model before assembly.



We removed the girder and support struts for the barricade from the sprues, and sprayed them black (car undercoat spray) and the rest of the kit white (car undercoat spray).

The “white” pieces were then removed from the sprue and their edges painted white (model paint).

Any bare metal sections on the “white” pieces were painted black (model paint). All black “bare metal” sections were then dry brushed with a silver colour (DIY / Household Emulsion).

Detail areas were painted red (DIY / Household emulsion paint).

After assembly, any points where lugs were visible were overpainted with the appropriate colour, then corrosion and rust were then applied (model paints)

The whole model was streaked with a black ink wash (model paint), ensuring all streaks worked with gravity towards the lowest point on each piece.

