



15mm Crashed Starship - Airlock

B15-SF-506

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

We suggest you paint portions of this model prior to assembly – see below for a painting guide.




Take the two sides and the top/bottom pieces from the sprue.



Glue then together as shown above.



Glue this assembly to the back of the wall section.

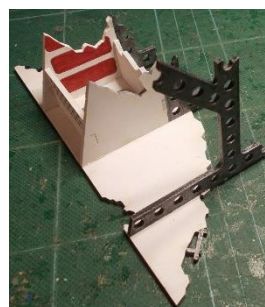


Then add the support gantry.



The finished piece after final painting stages.

Painting

We suggest you paint your model before assembly.

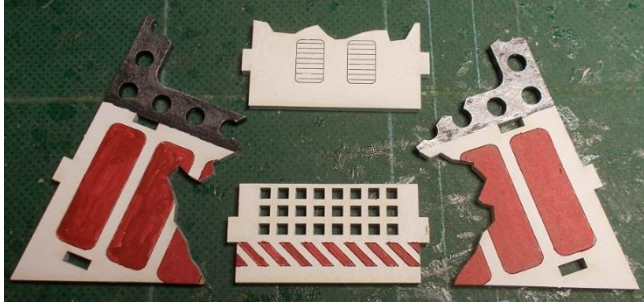

We removed the girder piece from the sprue, and sprayed it black (car undercoat spray). The rest of the kit was left on the sprue and sprayed white (car undercoat spray).

The “white” pieces were then removed from the sprue and their edges painted white (model paint).

Any bare metal sections on the “white” pieces were painted black (model paint). All black “bare metal” sections were then dry brushed with a silver colour (DIY / Household Emulsion).

Detail areas were painted red (DIY / Household emulsion paint).

Once dry, the model was assembled.

After assembly, any points where lugs were visible were overpainted with the appropriate colour, then corrosion and rust were applied (model paints)

The whole model was streaked with a black ink wash (model paint), ensuring all streaks worked with gravity towards the lowest point on each piece.

