

BLOTZ

15mm Fort Stairs

B15-SR-002


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

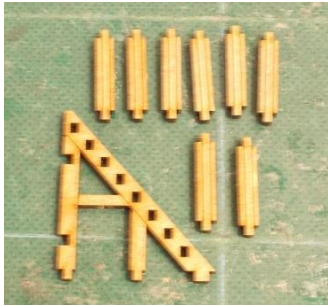


Remove one of the supports and the steps from the sprue.



Glue the steps into the non-etched side of one the supports.



Then take the other support and (starting from either the top or the bottom) attach it in position, gently easing each step into place.

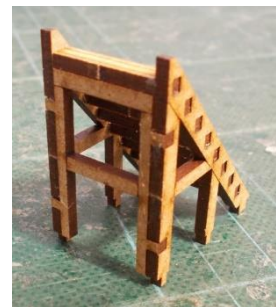

Glue the end support into position.



Attach the base.