



**BLOTZ**

## 20mm Dark Age House #4

**B20-DA-004**

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

We suggest you spray / paint the insert pieces while they are still on the sprue prior to assembling the model.

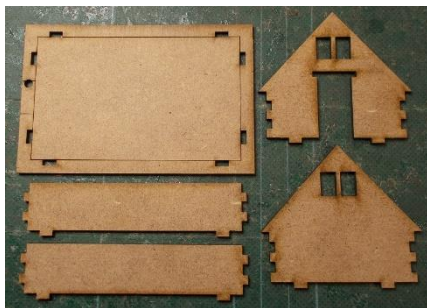

Remove the base, side walls and end walls from the sprue.




Glue the walls to the base (note the position of the end window in relation to the doorway).



Take the door and lintel.




Place the bottom lug of the door into the hole in the base. Put the door lintel on top of the door and slide it into position (as shown)

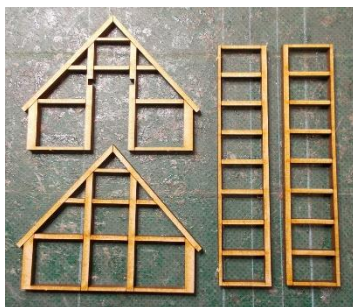


Take the frames from the sprue.



Glue the front frame into position, gently sliding it around the lintel. Then add the other frames.

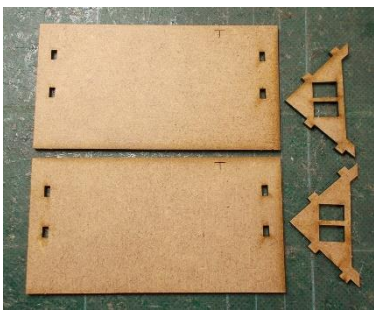


Take the pieces which form the roof.  
Note the "top" of the roof is marked with a "T".

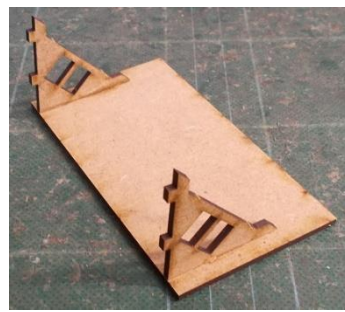

Take the pieces which form the roof.  
Note the "top" of the roof is marked with a "T".



Then glue the other side of the roof into place.

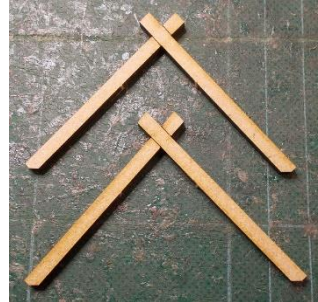

Take the two end beams.



Glue them to the building as shown so their lower edge is flush with the one on the building.



Add the insert pieces.



The smoke hole cover is formed from the pieces shown.



Glue the two supports to one side of the cover.  
As the pieces are thin, only apply pressure to the lugs.



Then attach the other side of the cover.



Add the thatch (see separate "Thatching" instruction sheet)



Glue the smoke hole cover to the roof.



The finished model.