

**BLOTZ**

## 20mm Roof #2

**B20-MD-202**

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

You may find it easier to paint portions of this model **BEFORE** construction – please see the end of the document for info about this.




Remove the roof pieces and end supports from the sprue.



Glue the end supports to the **back** of one of the roof pieces (as seen above).



Glue the second roof piece into position, aligning it using the lugs/holes provided. We recommend you paint your roof at this point (see Painting tips below)

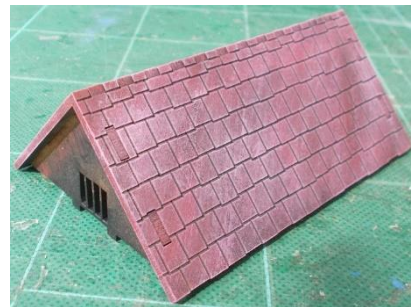


The roof once painted.




Glue the roof plate into position.




Add the roof frames at each end.

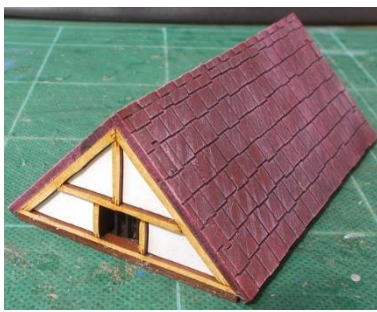


Glue the insert panels into position.

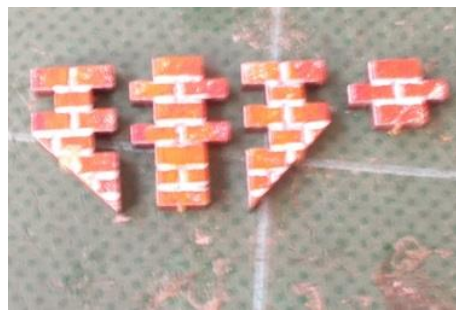

Take the chimney pieces...

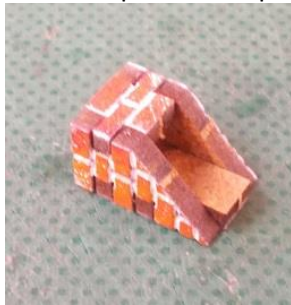

And glue them together as shown above.

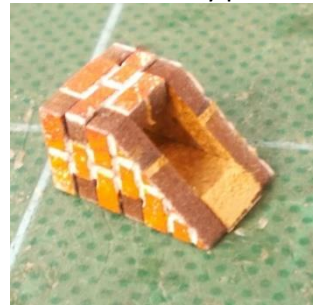

Allow it to dry, then trim the bottom of the front section so it is the same angle as the sides.



Glue into place on the roof.

## Painting

The outer frames remained unpainted.  
The insert pieces were sprayed white.



The roof was partially assembled – roof pieces glued to the end sections – before spraying the entire roof with a black undercoat spray (e.g. car undercoat), then once that had dried dry-brushing the whole roof with a chocolate brown followed by a red colour (both DIY household emulsion paint)

