



20mm Desert Fort – Long Wall - Gates

B20-ME-102


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

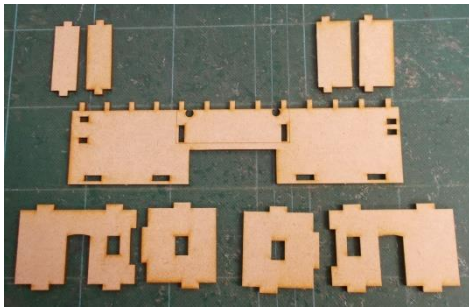

Remove the pieces shown above from the sprue.

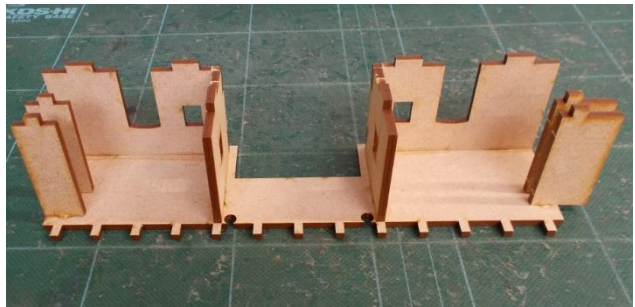


Turn the "roof" upside down and attach the other pieces to it as shown.

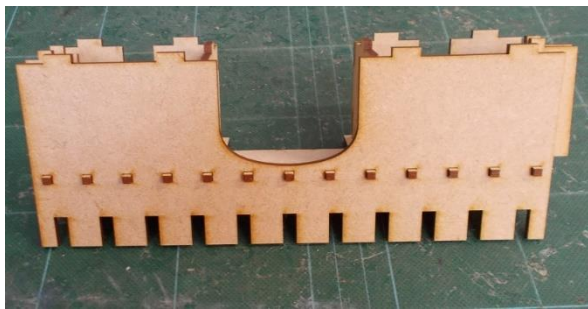

Add the front wall.



[Optional] Glue a door behind each doorway.

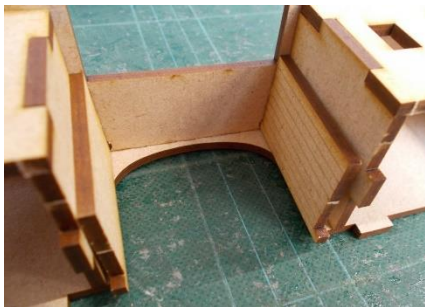

Place (do not glue) the gates into their holes.



Turn the model the right way up and attach the base, slotting each lug into the associated hole.



Add the two steps above the entrance.



The finished model.