



BLOTZ

20mm Desert Fort – Corner Tower

B20-ME-104


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

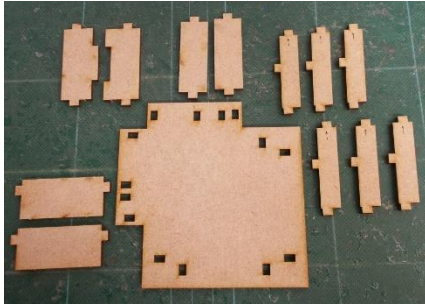

Remove the pieces shown above from the sprue.



Glue them together as shown above – Note the angled supports have an arrow on them which should point upwards.

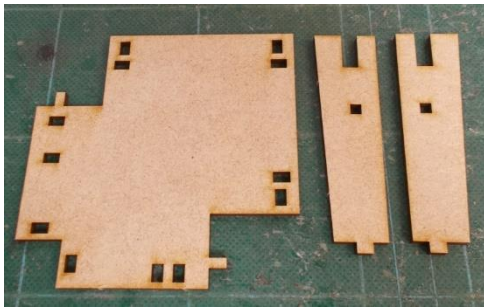

Take the walkway and end wall sections.



Attach the walkway in place then add the LEFT wall piece only. The RIGHT wall (with the arrow pointing at it) should not be added at this point.



Take the tower roof and the two thinner tower wall pieces.



Add them to the model as shown.



Add the other two tower wall pieces, then glue the wall section that was left off earlier into place.



The finished model.