



20mm/28mm Ancient City Walls – 90 Degree Corner B20-ME-201 / B28-ME-201

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


The images here show the 20mm version of this kit, but the 28mm version is constructed in exactly the same way.




Remove the pieces shown above from the sprue.

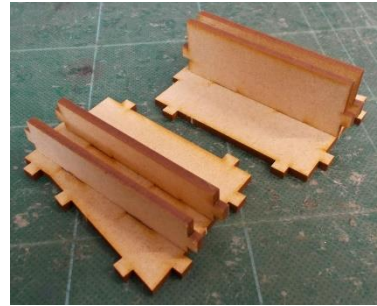

Glue the connectors to the main supports – the wider connectors being the ones closest together.

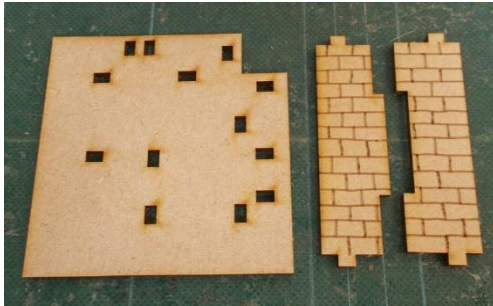

Take the base and rear wall pieces.

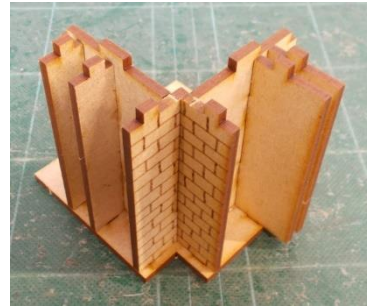

Glue the supports to the rear wall, then attach the whole assembly to the base (see pic).




Add the Additional supports for the front wall (see pic).



Add the walkway section, gently slotting each lug into the corresponding hole.



Add the front lower walls.

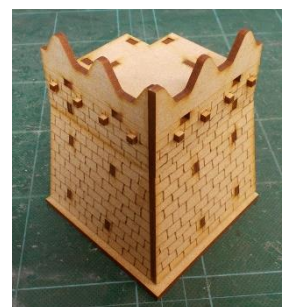

Add the crenellation pieces



Then attach the long strips.



The finished model.