



BLOTZ

Japanese Walls (50mm / 100mm / 150mm)

B20-WF-114 / B20-WF-112 / B20-WF-119

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

The pictures are from the 50mm kit, but the processes for the 100mm and 150mm are identical.




Take the base and two wall sections from the sprue.




Glue the walls back to back and attach to the base so that there is a 2mm gap at either end (see pic).



The tile support is formed from the pieces shown above.

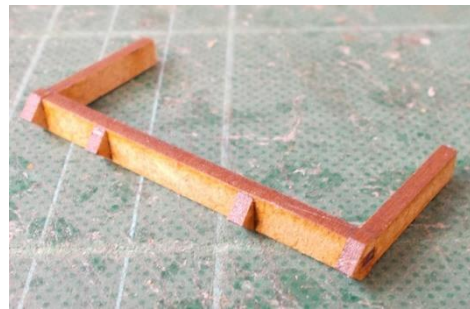


Glue them together as shown.

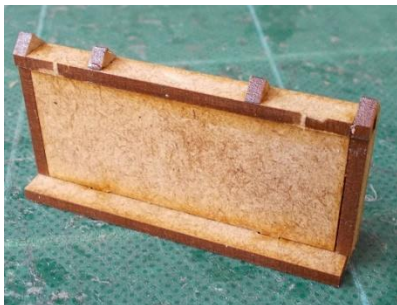

Glue this assembly to the wall so the uprights are flush with the walls.



Paint the components of your model (see below for details)

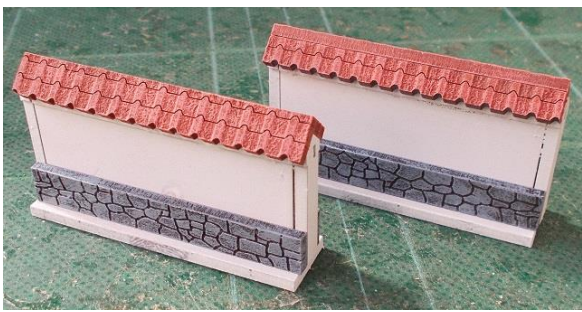

Glue a stonework strip to either side of the wall and attach the roof tiles.



The assembled (50mm) wall with texturing and static grass applied to the base.

Painting

The wall was sprayed white using car undercoat

The roof was sprayed red using car undercoat then a light drybrush of a salmon pink applied.

The stone was sprayed black using car undercoat then a light drybrush of a pale grey colour was applied.