



**BLOTZ**

# Japanese Corner Wall

## B20-WF-115


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

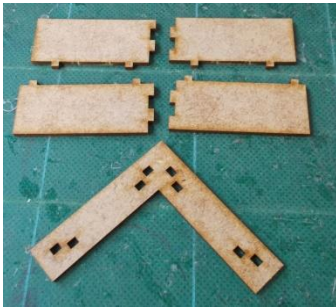

Take the base and four wall sections from the sprue.



Glue the walls back to back and attach to the base so that there is a 2mm gap at either end (see pic).




Take the pieces shown above...




... and glue them together as shown.



Glue this assembly on top of the walls, so the uprights are flush to the ends of the walls.

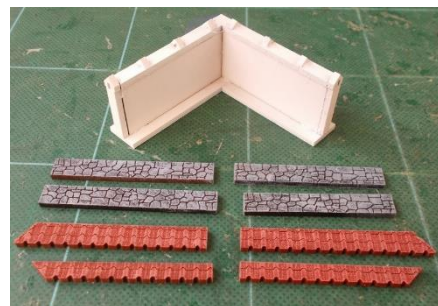

Paint the component parts of your model (see below for details)

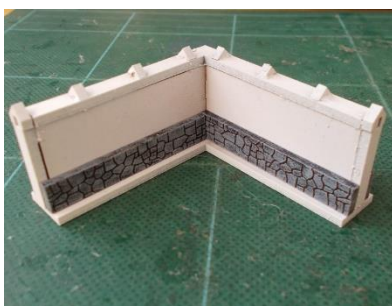

Glue the stonework into position.



Then add the roof, one side at a time. The ends of the roof should be flush to the ends of the walls.



The completed wall section after basing and flock have been applied.

### **Painting**

The wall was sprayed white using car undercoat.

The roof was sprayed red using red-oxide car undercoat then dry brushed with a salmon pink colour (DIY emulsion paint).

The stone was sprayed black using car undercoat then a dry brush of pale grey applied.