



**BLOTZ**

## 28mm Palisade – 90° Corner (External)

**B28-DA-201**


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

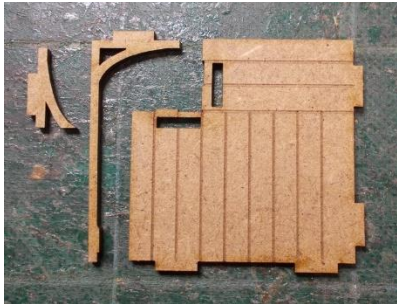


The upper walkway (and its supports)



Attach them together as shown above.



Add the lower walkway.

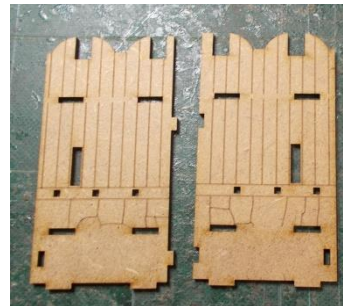


The rear palisade sections.



Add the right-hand one to the walkway.



The attach the left-hand one.

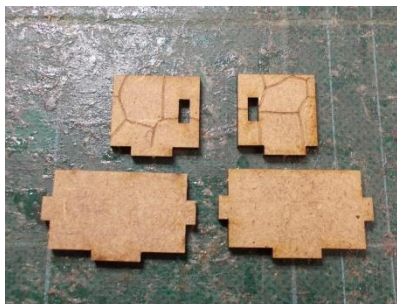

Take these pieces from the sprue.



Attach them together as shown above.



Add these pieces to the model.



Add the base.



The defensive spikes.



Push the strip of spikes through the palisade section so they extend out of the front.



(The same stage when viewed from the rear.)



The front palisade sections.



Attach the front palisade sections using the spikes to help align them.



The stonework and upper strips.



Add them to the model.



Add the end plate to each side of the model.  
Note: the holes will accept 2mm diameter neodymium magnets (not supplied)



The completed model shown from the front and rear.