



# 28mm Desert Fort – Long Wall - Gates

## B28-ME-102


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

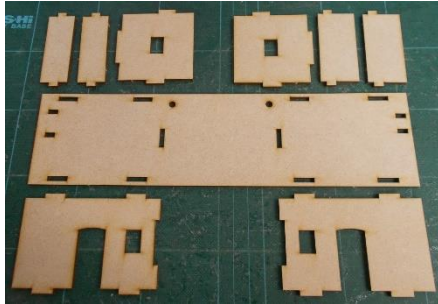


Remove the pieces shown above from the sprue.



Attach them together as shown above.



[Optional] Glue a door behind each doorway.

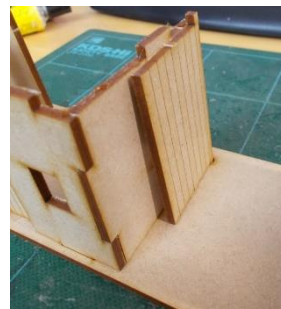

Place (do not glue) the gates into their holes.



Glue the walkway into place, gently slotting each lug into the appropriate hole.



Add the front wall.



Add the two steps above the entrance.



The finished model.