



BLOTZ

28mm Desert Fort – Internal Corner Wall

B28-ME-106


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

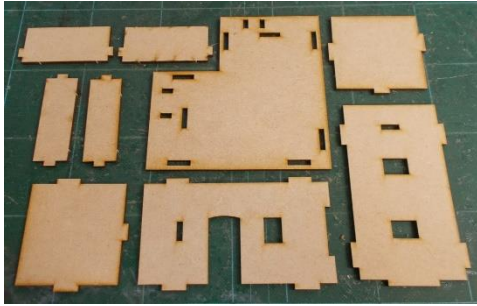

Remove the pieces shown above from the sprue.

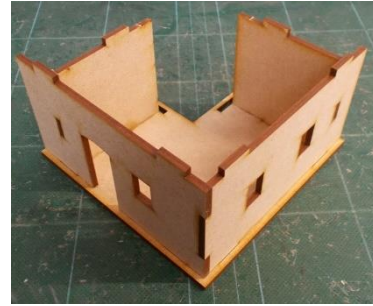


Add the walls and internal supports (see pic).



Add the connector pieces.



[Optional] Glue the door behind the doorway.

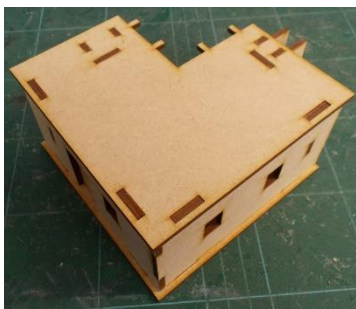

Attach the walkway, gently inserting each lug into the associated hole.



Add the right hand wall section....



..then the left-hand one.



The finished model.