



BLOTZ

28mm Desert Fort – Short Wall - Door

B28-ME-108


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

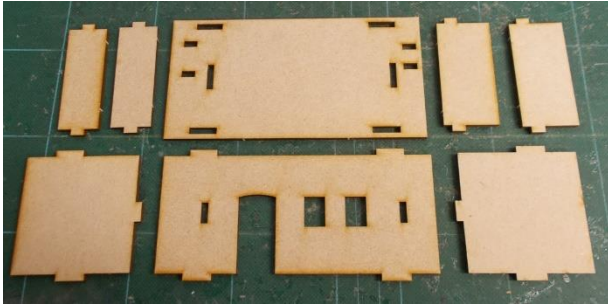

Take the pieces shown above from the sprue.

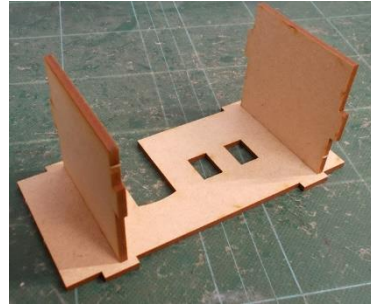

Attach the supports to the back of the wall.



Glue the assembly to the base and add the connector pieces (see pic)



[Optional] Glue the door behind the doorway.



Add the walkway, gently aligning each lug with the corresponding hole.



Attach the front wall.



The finished model.