



**BLOTZ**

## 28mm Wide Upper #1

### B28-OW-590


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

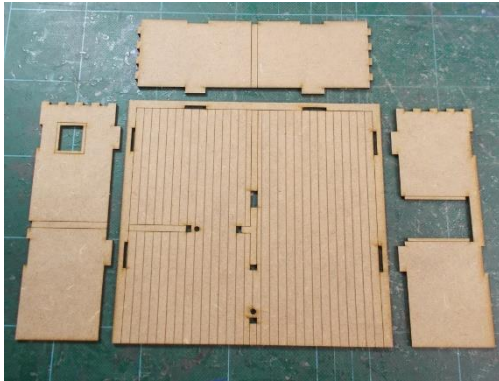

Start by removing these pieces from the sprue.



Attach the walls to the base – the lugs will extend through the base.

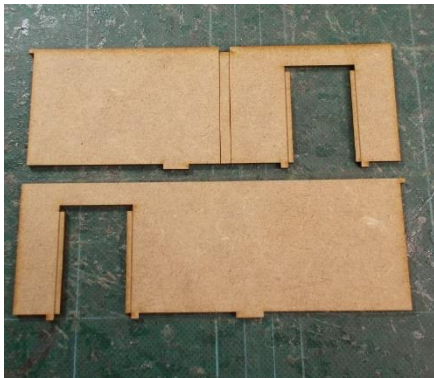

Take the two central wall sections.



Glue them back-to-back then insert them into the model as shown above.



Take the two short walls.



Glue them back-to-back then add them to the model.



The outer door and its supports.



Slide the lower door support into the gap by the floor, then insert the lug of the door into it. Slip the support over the upper lug, then gently push it into the upper gap in the door frame.



Repeat this for the inner doors (they only have separate upper supports)



The outer frames.



Glue them to the outside of the building as shown.



The insert pieces.



Glue them into the gaps within the frames.



The window and sill.



Glue the rear room sill into place, then add the window.



The finished model.