



28mm Old West Roof #6

B28-OW-605


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

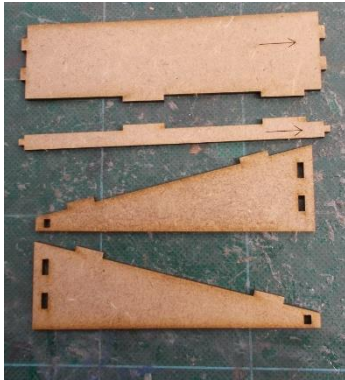

Remove the pieces shown above from the sprue.



Glue the pieces together as shown above.

Note: The two cross bars have an arrow on them. These should both point towards the **front** of your building.




Glue the roof into place.



The end and side "frames"



Glue the frames to the outside of the model as shown above.

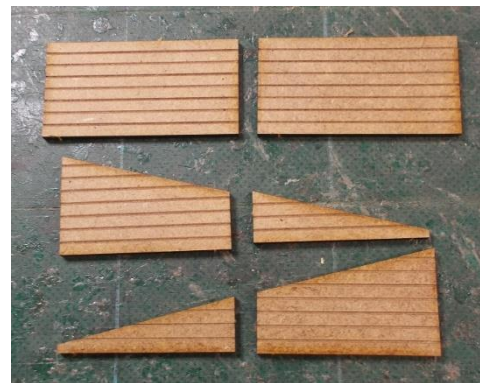

The insert pieces.



Glue these into the frames.



The roof strips.



Glue the strips into place.



The completed roof.