



## 28mm Large Shed

**B28-ST-153**

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.



Take a side wall and the window strips from the sprue.



Glue the strips into position as shown above.  
Repeat for the other side wall.



Take the door piece along with the window and door strips.




Glue them into place.  
Repeat for the windows on the other end piece.  
The door has a sprue point on it, so if required it can be detached and repositioned.



Take the floor and four walls.



Glue them together as shown above.

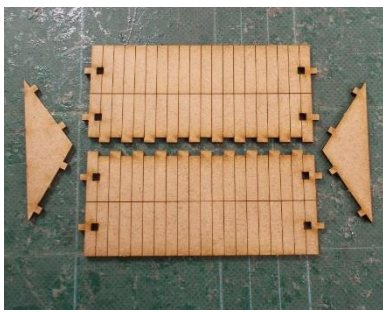

Take the roof pieces.



Attach the triangular supports to one side.



Then add the other side.



Add the end boards.



The finished model