

The logo for 'BLOTZ' is displayed in a stylized, bold, white font inside a black, irregular, splatter-like shape.

28mm Starship Corridor (Wide to Narrow - Left)

B28-STA-121


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

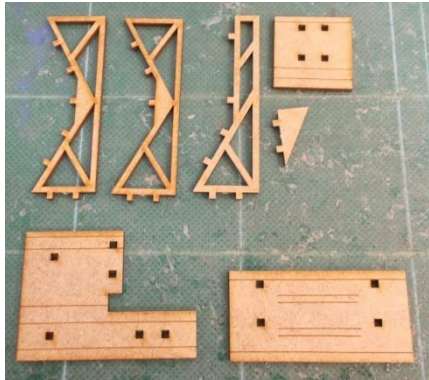

Take the pieces shown above from the sprue.
Note – the centre support does not have any lower lugs (see pic).



Glue the supports to the base.




Attach the lower panel.



Glue the centre panel into place.




Add the small triangular piece, then add the top panel.

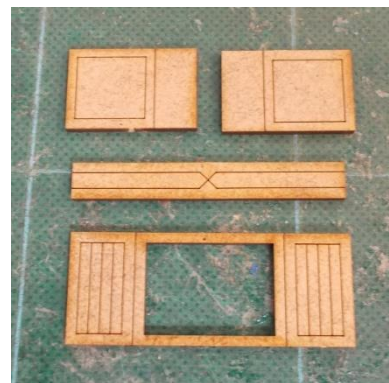

The embellishments for this side of the passageway.



Glue these into position as shown above.

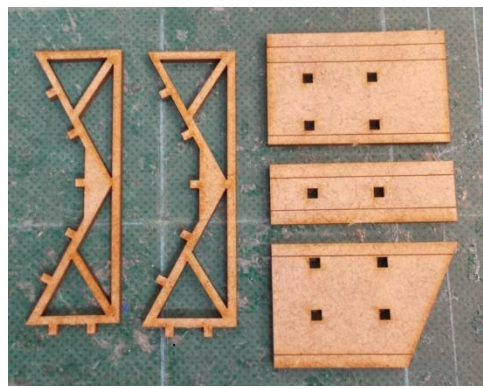

Take the pieces shown above from the sprue.




Glue them together as shown.



The corner support is formed from these two pieces.




Glue them together.

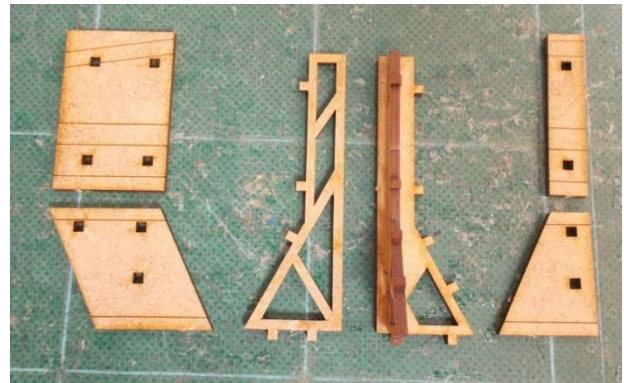

Take these pieces.



Assemble them into a column as shown above.

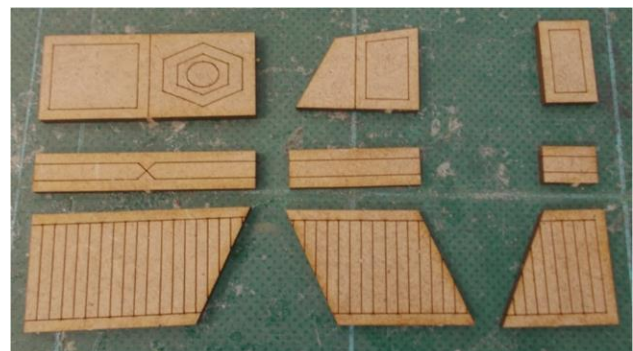

The embellishments for this side of the corridor.



Glue the wall and column to the base then once dry) add the embellishments.



The finished section.