



BLOTZ

28mm 3x3 Starship Room (2 doors opposite)

B28-STA-501


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

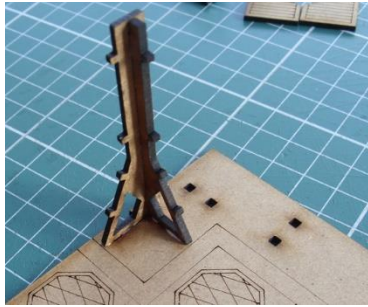

Remove the two pieces of the corner support from the sprue, glue them together and insert into the base (as shown above) for the left-hand side of the doorway (when looking into the room)

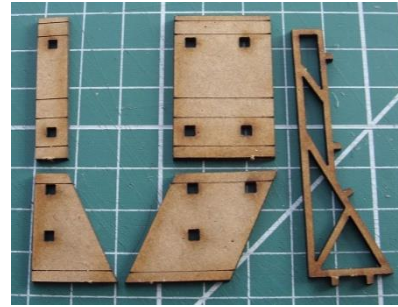

Remove the short wall support (note this only has one lug on the lower portion) and the left-hand corner wall sections from the sprue.

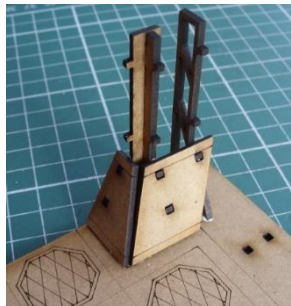


Attach the lower portion of the wall...



...then add the upper sections.



Repeat this for the other side of the doorway.

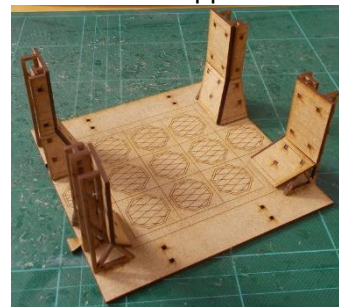


Repeat these steps again for the doorway on the opposite side of the room.



Remove the pieces which for one of the long walls from the sprue.



Glue them together as shown above. Repeat to create the other long wall.

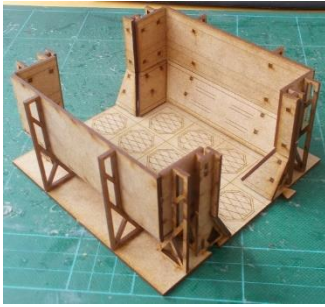

Glue the long walls to the base.
Leave to dry.



Remove the lower decorative strips from the sprue
(these all have vertical etched lines) and glue them
into position using the horizontal lines on the walls to
help position them.



Repeat this procedure with the middle strips
(which have horizontal lines)



And then finally with the top strips.



The completed model.