

6mm Fire Station B06-CS-008

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

You may find it easier to paint this kit prior to construction.

We used a red oxide car undercoat for the walls and a white car undercoat for the framework / shutter doors. Other details (windows, doors, etc) were picked out using model paints.

Foyer (B06-CS-103)



Remove the walls and base from the sprue.



Take the four shutter doors.



Glue them together as shown above.



And glue two into position behind the archways on each side of the building.



Take the four frame sections.



Glue them into position.

Mid-Section (B06-CS-154)



Take the walls and "base" from the sprue.




Glue each wall section into position on the base.



Next, take the frames...



..and work around the building, adding each in turn.

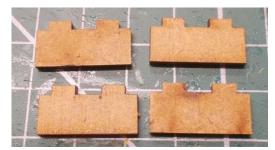

The four supports.




Turn the building over and attach the supports as shown so that they stick out above the walls.

Allow time for them to dry.



The completed section.

Roof Section (B06-CS-203)

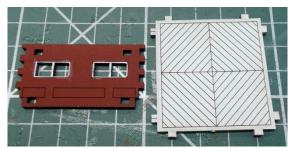


Remove the wall section and "roof" shown above from the sprue. Note the roof has a dash "-" on two of its lugs.



Glue the lugs with the dash on them into the holes in the wall.



Take the other pieces shown above.

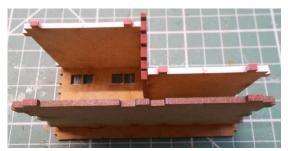

Glue the floor piece to the back of the assembly you just made, then insert the whole thing into the holes in the back of the wall.

Add the "base" to the wall as shown.



Take the other three wall pieces.




Attach them to the model.



The frames.



Work round the model, glueing each frame into place.

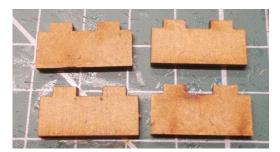

The support lugs.



Turn the model over and glue the supports into the holes in the "base" as shown above.



The completed section



The completed model.