



6mm Stepped Building

B06-CS-012


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

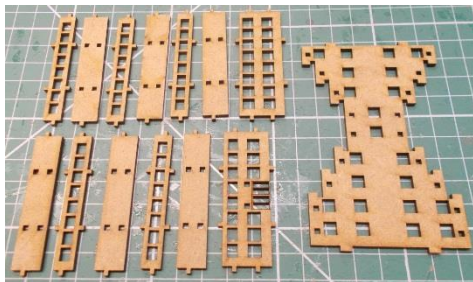

Remove the pieces shown above from the sprue.

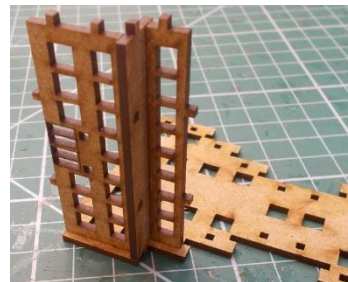

Glue the door section to the side, then add a plate and a window piece as shown above.



Note the lugs on the plates and window pieces are off-set, with the lugs on the windows being towards the bottom of those pieces, while the lugs on the plates are towards the "front" of the building.



Continue adding plates and windows until you complete the side.




Then repeat it on the other side of the building.




Add the other side plate, gently easing each lug into the appropriate hole.




Glue the base and roof into place.

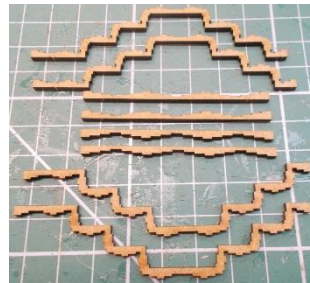

The embellishments for the sides of the building.

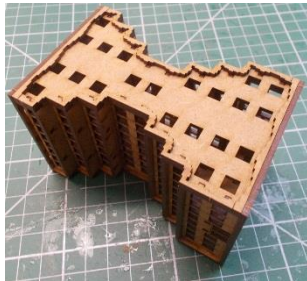

Add the embellishments at the top and bottom, then add the stepped pieces. Repeat this on the other side of the building.

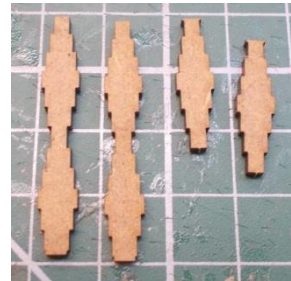

More embellishments.



Add these as shown.



The parapet for the roof is formed from these pieces.



Glue them into place.



Embellishments for the front / rear of the building.



These should be positioned as shown above.



Detail showing the embellishments around the door.



Detail showing the embellishments on the central windows.

The finished building.



The finished building.