


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

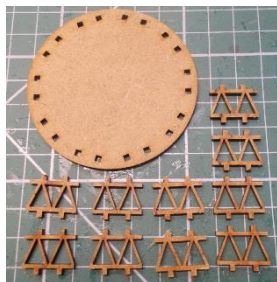

Remove the base and lower supports from the sprue.



Glue them together as shown above.



Add the upper ring, slowly moving round the supports and guiding them into their respective holes.



Each strip is formed from the pieces shown above.



Glue them together as shown.



Add three strips to the model.



Then add the top ring. Add each new strip in turn – inserting the base first then easing the upper end into its holes in the top ring.



The completed model.