

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.



All the track bed sections have the position of the tracks etched into them.

Straight sections also have holes cut for lugs on the tracks to slot into.

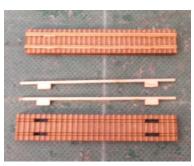

For straight track, take the track sections (bottom of pic) and slot them into place on the track bed using the holes to align them (top pic)



For any other pieces (curves, turnouts, crossovers, etc) they are supplied with "tabs" between the rails which keep the rails the right distance apart.

Glue the rails to the track bed (using the etched guides to position them correctly) then once dry carefully remove the tabs with a sharp blade.